

4505 MODEL



AAKACZ142 系說明書

AAKACZ142 INSTRUCTION MANUAL

滑套作動	空氣手拉	RECOIL	SPRING COCKING
子彈上旋	固定式	HOP UP	FIXED
材質	全塑膠	MATERIAL	FULL PLASTIC
填彈數	12 發	CAPACITY	12 ROUNDS
初速	78 公尺/秒	VELOCITY	78 m/s
焦耳數	0.6 焦耳	ENERGY	0.6 Joule max
長度	217 公釐	LENGTH	217 mm
重量	355 克	WEIGHT	355 g
適用彈匣	AAKACS140	MAGAZINE	AAKACS140

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

射擊前的準備 BEFORE SHOOTING



- 將滑粒壓到底端並使其固定住。
Pull the magazine follower down and lock it in place by pushing the follower knob over the stopper.
- 壓下子彈卡榫，以便裝填子彈。
Press the BB catch lever down and hold it down to load BB.
- 將BB彈裝入(最多12發)。
Load BB into the magazine. Maximum BB capacity is 12 rounds.



安全裝置 SAFETY



射擊操作 COCKING AND SHOOTING


- 將保險推到“射擊時”狀態。
Switch safety off.
- 將滑套往後拉到底，聽到“卡噠”聲響。
Pull the slide until you hear a “click” indicates the slide is locked and ready to shoot.

Lorem ipsum

- 確認滑套是否確實彈回原來的位罝。
(若滑套未回原位而扣引扳機，將會導致槍身內部活塞損壞)
Make sure that the slide has returned back to its original position before pulling the trigger. (pulling the trigger before the slide is properly seated will cause intenal damage to the airsoft gun.)
 - 扣引扳機後，射擊。
Pull the trigger to shoot.
 - 重複動作B去進行下一發上膛射擊準備。
Repeat step B for next shot.
 - 若不再繼續射擊，請將保險推至“不射擊時”狀態。
At the end of use, please switch the safety on and empty the magazine.
- ⚠ 注意: 向目標射擊之前，請勿將手指放在扳機上！
⚠ CAUTION: Do not pull the trigger except shooting.

故障的原因與排除 BREAK DOWN FAQ

- 卡彈的清除:
不良B.B彈是造成卡彈的原因，滑套若未回復至正確位置，可能的原因就是卡彈，請以細棒清除B.B彈。
BB Jam:
Low quality BB is the main reason causing jamming. Using narrow stick to clear it out is recommended.
- 如果連續拉動滑套，即會導致連續進彈。所以請每拉動一次，就做一次射擊。
Repeatedly racking the slide without shooting will lead to multiple BBs (or rounds) being chambered. Make sure to fire after every pull of the slide.
- 使用一段時間後，請再次潤滑(噴砂油脂)滑套滑動處及氣缸與活塞滑動處。
Lubricate the piston as picture after a period usage.

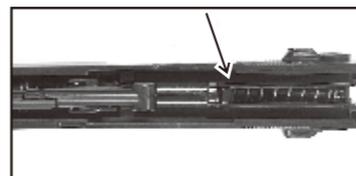

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety could fail. Always handle the airsoft safely even when the safety is “on safe”. Never point the airsoft at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BBs. Never use ①BB diameter larger than 6 mm ② BB with unsmoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airsoft.
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airsoft.

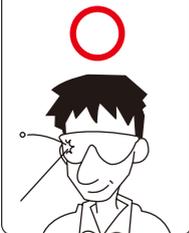

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啟保險。
★When in public, always carry the airsoft in a locked carrying case or bag. Make sure it is unloaded and on safe.

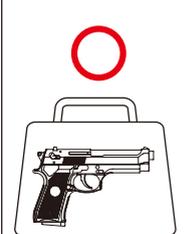

★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airsoft.

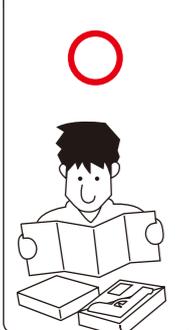

★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.



★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or animals. Brandish this airsoft in public is dangerous and may be a crime.



★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.



★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airsoft may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

KACZ142 系列 零件表 KACZ142SERIES PARTS LIST

圖號	零件名稱	圖號	零件名稱	圖號	零件名稱
P05	槍管接筒	P127	槍柄	S05	擊鐵扭簧
P06	氣缸卡榫			S07	槍管導管壓簧
P07	接筒卡榫	Z01	活塞固定座	S16	扳機扭簧
P08	氣缸			S17	彈匣卡榫壓簧
P09	活塞	R01	活塞迫緊	S18	扳機連桿壓簧
P10	彈簧支座	R02	子彈迫緊HOP-UP		
P24	活塞卡榫			E08	⊕2.3x12束鉚
P75	上蓋	B04	槍管	E17	⊕2.6x4L-5L尖黑
P76	氣缸後罩				
P77	後準星罩	F02	平頭軸(氣缸)	K01	氣缸用貼紙
P78	槍管導管	F03	軸(擊鐵)		
P79	擊鐵	F04	軸(擊鐵箱)	U1	彈匣組件
P81	扳機	F14	軸	X1	內槍管組件
P83	扳機連桿(右)	F17	軸(扳機)	X2	氣缸組件
P84	保險桿	F19	軸(彈匣卡榫用)	X3	擊鐵箱組件
P85	彈匣卡榫(左)	F20	軸(扳機連桿)		
P86	彈匣卡榫(右)	F21	軸(槍柄用)		
P88	擊鐵箱(左)	F82	扳機連桿(左)		
P89	擊鐵箱(右)	M34-F17	軸(扳機用)		
P90	本體				
P91	導桿	S03	活塞卡榫扭簧		
P112	擊鐵連動片	S04	活塞壓簧		

零件有時為了改良而不經預告變更

KACZ142 系列 零件表 KACZ142 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P05	BARREL CONNECTOR	P127	GRIP	S05	HAMMER SPRING
P06	CYLINDER CATCH			S07	OUTER BARREL SPRING
P07	CONNECTOR CATCH	Z01	PISTON BASE	S16	TRIGGER SPRING
P08	CYLINDER			S17	MAGAZINE CATCH SPRING
P09	PISTON	R01	PISTON PACKING	S18	TRIGGER BAR SPRING
P10	SPRING STOCK	R02	RUBBER CHAMBER		
P24	PISTON CATCH			E08	SCREW 2.3x12
P75	SLIDE	B04	INNER BARREL CAP	E17	SCREW 2.6x4L-5L
P76	CYLINDER REAR COVER				
P77	REAR SIGHT COVER	F02	PIN (CYLINDER)	K01	PISTON COVER STICKER
P78	OUTER BARREL	F03	PIN (HAMMER)		
P79	HAMMER	F04	PIN (CHASSIS)	U1	MAGAZINE UNIT
P81	TRIGGER	F14	PIN	X1	INNER BARREL UNIT
P83	TRIGGER BAR (R)	F17	PIN (TRIGGER)	X2	CYLINDER UNIT
P84	SAFETY	F19	PIN (MAGAZINE CATCH)	X3	CHASSIS UNIT
P85	MAGAZINE CATCH (L)	F20	PIN (TRIGGER BAR)		
P86	MAGAZINE CATCH (R)	F21	PIN (GRIP)		
P88	CHASSIS(L)	F82	TRIGGER BAR (L)		
P89	CHASSIS(R)	M34-F17	PIN (TRIGGER)		
P90	FRAME				
P91	RECOIL GUIDE	S03	PISTON CATCH SPRING		
P112	HAMMER LINKAGE	S04	PISTON SPRING		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KACZ142 系列 零件分解圖 KACZ142 SERIES EXPLODED VIEW

