

Match 1911



AAKACZ26系說明書

AAKACZ26 INSTRUCTION MANUAL

滑套作動	空氣手拉	RECOIL	SPRING COCKING
子彈上旋	固定式	HOP UP	FIXED
材質	全塑膠	MATERIAL	FULL PLASTIC
填彈數	12 發	CAPACITY	12 ROUNDS
初速	78 米/秒	VELOCITY	78 m/s
焦耳數	0.6 焦耳	ENERGY	0.6 Joule max
長度	225 公釐	LENGTH	225 mm
重量	760 克	WEIGHT	760 g
適用彈匣	AAKACS260	MAGAZINE	AAKACS260

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
SINCE 1972 www.kwcgun.com

台南市仁德區義林路168巷89號

NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)

TEL : +886-6-2798175 FAX : +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

射擊前的準備 BEFORE SHOOTING



- 將滑粒壓到底端並使其固定住。
Pull the magazine follower down and lock it in place by pushing the folower knob over the stopper.
- 壓下子彈卡榫，以便裝填子彈。
Press the BB catch lever down and hold it down to load BB.
- 將BB彈裝入(最多12發)。
Load BB into the magazine. Maximtm BB capacity is 12 rounds.



安全裝置 SAFETY



射擊操作 COCKING AND SHOOTING

- 將保險推到“射擊時”狀態。
Switch safety off.
- 將上蓋往後拉到底，聽到“卡噠”聲響。
Pull the slide until you hear a “Click” indication the shot is locked and ready.
- 確認上蓋是否確實彈回原位。
(若上蓋未回原位而扣引扳機，將會導致槍身內部活塞損壞)
Make sure that the slide has returned backed to its original position before pulling the trigger. (pulling the trigger before the slide is properly seated will cause internal damage to the airsoft gun.
- 扣引扳機後，射擊。
Pull the trigger to shoot.

- 重複動作B去進行下一發上膛射擊準備。
Repeat step B for next shot.
- 若不再繼續射擊，請將保險推至“不射擊時”狀態。
At the end of use, switch the safety on and remove the magazine.




- 子彈用盡時上蓋後定。
Hold open when BB runs out.
 - 按下上蓋止動片以復進上蓋。
Press slide stop to release slide.
- ⚠ 注意: 向目標射擊之前，請勿將手指放在扳機上！
⚠ CAUTION: Do not pull the trigger except shooting.

後準星調整 ADJUST REAR SIGHT



故障的原因與排除 BREAK DOWN FAQ

- 卡彈的清除:
不良B.B彈是造成卡彈的原因，上蓋若未回復至正確位置，可能的原因就是卡彈，請以細棒清除B.B彈。
BB Jam:
Low quality BB is the main reason causing jamming. using narrow stick to clear it out is recommended.
- 如果連續拉動上蓋，即是連續進彈，所以請每拉動上蓋一次，就做一次的射擊。
Oen BB will be chambered by each pull of slide. always shoot after each pull of slide.
- 使用一段時間後，請再次潤滑(噴砂油脂)上蓋滑動處及氣缸與活塞滑動處。
Lubricate the piston as picture after a period usage.

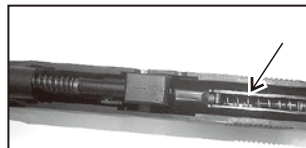

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。


- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airsoft is intended for recreational or training purposes.To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety could fail. Always handle the airsoft safely even when the safety is “on safe”. Never point the airsoft at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BBs. Never use ①BB diameter larger than 6 mm ② BB with unsmoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airsoft.
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airsoft.

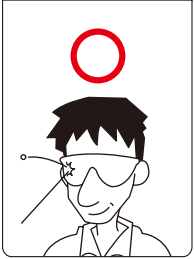


★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啟保險。

★When in public, always carry the airsoft in a locked carrying case or bag. Make sure it is unloaded and on safe.

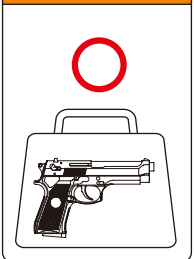

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airsoft.

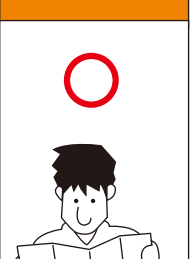


★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airsoft at any people or animals. Brandish this airsoft in public is dangerous and may be a crime.

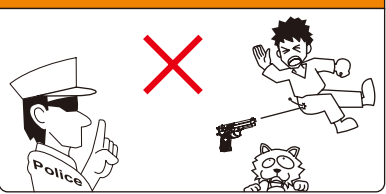


★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

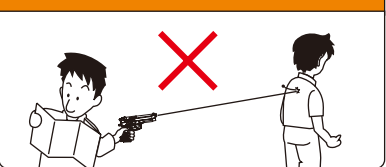

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airsoft may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

KACZ26 系列 零件表

KACZ26 SERIES PARTS LIST

圖號	零件名稱	圖號	零件名稱	圖號	零件名稱
P02	上蓋	Z41	上蓋止動片	F09	軸B(止動片)
P05	活塞	Z42	前準星	F14	平頭軸(氣缸)
P08	氣缸	Z43	後準星	F16	槍柄螺絲
P09	槍管接筒(HOP-UP)	Z44	後準星座	F18	槍柄後罩軸
P11	氣缸卡榫	Z46	槍管導管(短)		
P13	接筒卡榫	Z48	上蓋前罩	E03	⊕ M2.0X4 鍍
P20	本體	Z49	壓簧固定套	E09	皿 M2.3X6 黑
P22	彈匣導片			E07	KG-01 鋼珠
P23	槍柄(左)	R01	活塞迫緊		
P24	槍柄(右)	R02	子彈迫緊HOP-UP	S03	後準星壓簧
P28	彈簧支座	R09	O形環 P-3	S06	止動片壓簧
P30	氣缸後罩			S09	保險壓簧
		B05	後準星螺絲	S11	扳機壓簧
Z01	槍柄配重(左)	B12	槍管(銅)	S15	活塞壓簧
Z02	槍柄配重(右)	B16	保險桿軸	S16	導管壓簧
Z06	保險(左)	B19	導管銅套		
Z07	保險(右)	B21	回位導桿	U1	內槍管組件
Z12	扳機			U2	彈匣組件
Z13	握柄保險	F02	軸(後準星座)	X1	擊鐵箱組件
Z18	彈匣定位框	F03	軸(擊鐵箱)	X2	彈匣卡榫組件
Z20	槍柄飾片(小)	F04	軸A(止動片)		
Z28	槍柄後罩	F08	氣缸罩		

零件有時為了改良而不經預告變更

KACZ26 系列 零件表

KACZ26 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P02	SLIDE	Z41	SLIDE STOPPER	F09	PIN B (SLIDE STOP)
P05	PISTON	Z42	FRONT SIGHT	F14	PIN (CYLINDER)
P08	CYLINDER	Z43	REAR SIGHT	F16	GRIP SCREW
P09	BARREL CONNECTOR	Z44	REAR SIGHT BASE	F18	REAR GRIP COVER PIN
P11	CYLINDER CATCH	Z46	BARREL GUIDE		
P13	CONNECTOR CATCH	Z48	SLIDE FRONT BUSHING	E03	SCREW M2.0X4
P20	FRAME	Z49	FIX ROD	E09	SCREW M2.3X6
P22	MAGAZINE SLIDER			E07	BEARING
P23	GRIP (L)	R01	PISTON PACKING		
P24	GRIP (R)	R02	RUBBER CHAMBER	S03	REAR SIGHT SPRING
P28	SPRING STOCK	R09	O-RING P-3	S06	SLIDE STOP SPRING
P30	CYLINDER REAR COVER			S09	SAFETY SPRING
		B05	REAR SIGHT SCREW	S11	TRIGGER SPRING
Z01	GRIP WEIGHT (L)	B12	INNER BARREL	S15	PISTON SPRING
Z02	GRIP WEIGHT (R)	B16	SAFETY LEVER PIN	S16	OUTER BARREL SPRING
Z06	SAFETY (L)	B19	BARREL GUIDE SLEEVE		
Z07	SAFETY (R)	B21	RECOIL BAR	U1	INNER BARREL UNIT
Z12	TRIGGER			U2	MAGAZINE UNIT
Z13	GRIP SAFETY	F02	PIN (REAR SIGHT BASE)	X1	HAMMER CASE UNIT
Z18	MAGAZINE FIX FRAME	F03	PIN (CHASSIS)	X2	MAGAZINE CATCH UNIT
Z20	GRIP COVER	F04	PIN A (SLIDE STOP)		
Z28	REAR GRIP COVER	F08	PISTON COVER		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KACZ26 系列 零件分解圖

KACZ26 SERIES EXPLODED VIEW

