

### 操作說明 **OPERATION**



- .推開彈匣上方蓋 子,即可放滿350
- 2.Open the upper cover and load the magazine as shown on the picture. The maximum capacity is about 350 rounds.



 
務必關閉

3.Close the


tab

rifle (2).





- . 拉下彈匣滑粒 及如圖固定。 4.Push down the
  - magazine follower and lock it as shown.

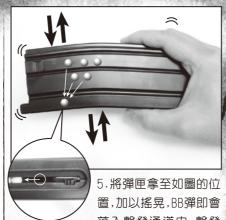

- 落入擊發通道内,擊發
- 涌道最多可置放18顆BB彈,擊發完畢後, 再重複以上動作。
- 5.In order to fill the firing compartment (about 18 BBs) of the magazine, turn the magazine as shown on the picture and shake gently. This will allow about 18 ammos to be placed in the firing compartment. Once these available rounds are shot, repeat precedent operations to replenish again the firing compartment. Repeat at will



- . 釋放彈甲滑約
- 6.Unlock the magazine follower.



- 1. 將彈匣往上推至定位。
- 7. Slide the magazine in the receptacle until it is locked (a distinct click will be heard).



- HOP UP調整環 ,可調整彈道
- .Turn the ring to adjust the **HÓP UP and** to fine tune vour shot. according ammo weight and weather conditions.



- ①拉動槍機上
- 方拉柄,注意方向需平穩的向 後拉動,否則易
- ②拉動護木下 方握柄。



- 9.In order to load the chamber. pull firmly the loading handle (or the Vertical grip) back until a click is heard, then
- release. At this stage, your softair rifle is loaded. All safety rules must apply among which: do not aim at a person or a hardsurface.




10.擊發時,瞄準目標後,開保險至如 圖FIRE位置,扣動鈑機,之後再重 覆上圖上膛動作。

10. To start shooting, aim at a target. put the safety on the FIRE" position (this riffle is a single shot action and requires loading after each shot). Pull the trigger. Once the available rounds are shot, repeat step on Picture 6 in order to replenish the firing compartment again, Repeat at will.





- . 當結束射擊練習不再使用時, 請將 保險推回SAFE位置,此時鈑機即被 鎖定不可扣下,並移除彈匣内所有 BR彈。
- 11.Once finished shooting, put the shooting selector back on the "Safe" position. Make sure the rifle is stored empty of any ammunition, magazine removed.

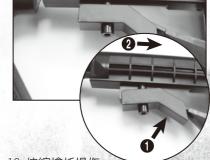

12. 伸縮槍托操作

12. How to operate your Retractable Stock.


並指向安全的方向射 擊,務必確定槍中已 無BB彈殘留才行

A.保管時請將彈匣抽出, B.彈匣移除後,並將保險 C.請勿將槍在待擊發狀態 ,保管在小孩子無法拿 管。(此將是發射彈簧 得到的安全場所 性能低下的原因》

# ▲ WARNING 請務必嚴格遵守

 此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避冤因使用方法不正 確或改造所發生的故障或事故,請務必詳讀說明書,正確的操作享受愉快的射擊運

- 1.除了發射時外,不要將手指頭掛在板機上。
- 2.選擇安全與適當標靶
- 3. 在非使用期間,請保持保險關閉且退彈的狀態,就算在非使用狀態,也要如同其己裝彈
- 4.如任何的機械產品,槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍 ,請勿將槍口對人。
- 5. 千萬不要對堅硬或平坦表面、水面射擊,以避免跳彈。
- 6.請妥善保管產品在未成年孩童無法伸手取得的場所
- 1.每次使用前後都應該檢查擋彈物,假如擋彈物表面有磨損失效或是反彈時請停止使用
- 8.請使用高品質BB彈,請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本 說明書指名的發射物
- 9. 檢查任何掉落之槍枝,以確保未影響其功能。





不可攜帶低動能遊戲

,請務必裝在袋子具

書内容



★請不要由槍口向内

前,請務必詳讀說

★請確認後再發射BB彈方向, 近無人或動物存在

★請不要在公開場合使用低動能

對準人或動物。

遊戲用槍,也請不要拿玩具槍













- A. Remove the magazine. Cock and shoot the airsoft again at a safe direction 2 to 3 times
- B. Store the airsoft with magazine removed and safety on. Keep it out of reach of children. C. Keeping the gun cocked for a long period of time will weaken the piston spring which
- could cause malfunction.
- D. Please avoid dry firing, for it could cause parts deformed or damage.

## A WARNING READ THIS OWNER'S MANUAL COMPLETELY

This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully, Enjoy the pleasant shooting experience by proper operation.

- 1.Do not put your finger on the trigger except shooting.
- 2.Please choose safe and proper target.
- 3.Please always keep the airsoft on safe and unloaded when not using.
- 4.Like all mechanical devices, an airsoft safety can fail. Always handle the airsoft safety even when the safety is "on safe". Never point the airsoft at any people.
- 5. Avoid ricochet. Never shoot at a hard or flat surface or at water.
- 6.Keep the airsoft out of reach for small children.
- 7. Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- 8.Only use high quality BB. Never use ①BB diameter larger than 6mm②BB with unsmoothed surface③ reused BB that has been fired incorrect projectiles not design for this airsoft.
- 9. Check any gun that has been dropped to ensure that its function has not been affected.





★ Always transport an airsoft in a locked car case. Make sure it is unloaded and on safe





discharge, do not look directly into the barrel.





Always be aware of your surroundir



airsoft may cause malfunction, void your warranty and may make it




# KA-36 系列 零件一覽表

圖號	零件名稱	圖號	零件名稱	圖號	零件名稱
P 01	氣缸	P 33	後準星座右	B 01	槍管
P 02	活塞迫緊	P 36	槍托卡榫下軸套		
P 03	活塞	P 37	槍托卡榫上軸套	R 01	HOP UP 子彈迫緊
P 04	彈簧支座	P 39	槍托調整板		,
P 05	活塞卡榫	P 41	機槍助進器	S 01	活塞卡榫壓簧
P 06	扳機	P 42	槍柄	S 02	活塞壓簧
P 07	保險	P 43	滑軌左側件	S 03	氣缸回位壓簧
P 08	保險配件	P 44	槍托B	S 04	彈匣壓簧
P 09	拉桿	P 45	槍托下蓋	S 05	握柄回位拉簧
P 10	槍管接筒左	P 49	拉桿下底	S 06	彈匣卡榫壓簧
P 11	HOP UP 調整片	P 50	槍柄固定件	S 07	槍托卡榫壓簧
P 12	槍管接筒右			S 08	拉桿回位拉簧
P 13	彈匣卡榫左	F 01	拉桿配件		
P 14	固定環	F 02	握柄推桿	E 01	⊕2.6*8束黑.熱
P 15	戰術滑軌左	F 03	拉桿軸	E 02	皿⊕2.3*6束黑.熱
P 16	戰術滑軌右	F 04	氣缸回位軸	E 03	⊕2.3*6*6邊 尖錏
P 17	戰術握柄左	F 05	扳機軸(3*21.8)	E 04	皿⊕2.6*8尖黑
P 18	戰術握柄右	F 06	活塞卡榫軸(2.5*21.5)	E 05	内六角螺絲M3*30L*P0.5.黑
P 19	彈匣卡榫右	F 07	握柄配重	E 07	⊕3.0*12*8邊 尖黑
P 20	本體左	F 08	槍托配重	E 08	⊕2.6*12 東黑
P 21	本體右	F 09	戰術滑軌配重	E 10	内六角螺帽M3*5.5*P0.5.黑
P 22	後準星	F 11	本體配重		
P 25	外槍管	F 12	彈匣配重		
P 26	防火帽				
P 27	前準星			- 2	10
P 28	彈匣左				
P 29	彈匣右			30	
P 30	彈匣滑粒			30.4	
P 31	彈匣上蓋				
P 32	後準星座左			1	

### **KA-36 SERIES PARTS LIST**

	No.	UNIT	No.	UNIT	No.	UNIT
	P 01	Breech	P 33	Rear sight base R	B 01	Barrel
	P 02	Piston Packing	P 36	Stock catch upper sleeve		
	P 03	Piston	P 37	Stock catch under sleeve	R 01	Hop Uop rubber chamber
	P 04	Spring Base	P 39	Stock lock		199
	P 05	Piston catch	P 41	Assist knob set	S 01	Piston catch spring
	P 06	Trigger	P 42	Grip	S 02	Piston spring
	P 07	Safety	P 43	Side Rail	S 03	Breech recoil spring
	P 08	Safety catch	P 44	Stock B	S 04	Magazine Spring
	P 09	Charging Handle	P 45	Stock cover	S 05	TAC front grip recoil spring
	P 10	Barrel cover L	P 49	Charging Handle plate	S 06	Magazine Catch Spring
	P 11	Hop Up adjustor plate	P 50	Grip lock	S 07	Stock Catch Spring
	P 12	Barrel cover R			S 08	Charging handle recoil spring
	P 13	Magazine catch L	F 01	Charging handle lock		
	P 14	Slip Ring	F 02	Tac front grip plate	E 01	Screw ⊕2.6*8
	P 15	Rail L	F 03	Charging handle bar	E 02	Screw ⊕2.3*6
	P 16	Rail R	F 04	Breech recoil bar	E 03	Screw ⊕2.3*6*6
5	P 17	TAC front grip L	F 05	Trigger pin	E 04	Screw ⊕2.6*8
	P 18	TAC front grip R	F 06	Piston Catch pin	E 05	Hexagon screw m3*301*p0.5
	P 19	Magazine catch R	F 07	Grip Weight	E 07	Screw ⊕3.0*12*8
	P 20	Safety	F 08	Stock weight	E 08	Screw ⊕2.6*12
	P 21	Lower receiver R	F 09	Rail weight	E 10	Hexagon nut m3*5.5*p0.5
	P 22	Rear sight	F 11	Lower Receiver Weight		
	P 25	Outer barrel	F 12	Magazine Weight		
	P 26	Compensator				
	P 27	Front sight			- 25	
	P 28	Magazine L				
	P 29	Magazine R			40.	
Service Servic	P 30	Magazine follower			35.4	
	P 31	Magazine cap	36			
	P 32	Rear sight base L				
	ACCOUNTS TO SECURE					CONTRACTOR OF THE PROPERTY OF THE PARTY OF T

#### KA-36 系列 零件分解圖 KA-36 SERIES DISASSEMBLY DIAGRAM

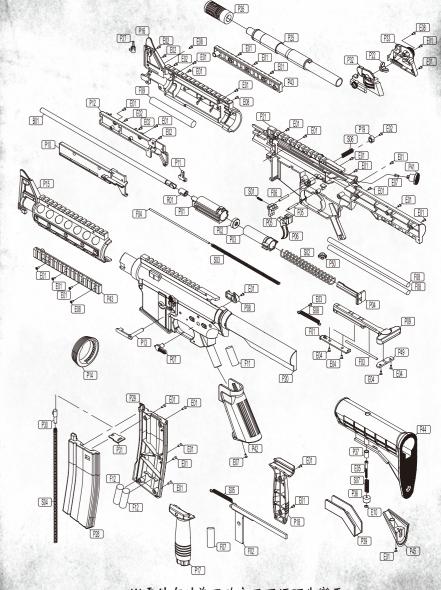

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement And such modification may be without advance notice.