

SUB MACHINE GUN



AAKCCF07 系列說明書 AAKCCF07 INSTRUCTION MANUAL

滑套作動	可動	RECOIL	BLOWBACK
子彈上旋	可調式	HOP UP	ADJUSTABLE
材質	塑膠/金屬	MATERIAL	FULL METAL
填彈數	39 發	CAPACITY	39 ROUNDS
初速	135 米/秒	VELOCITY	135 m/s
焦耳數	1.8 焦耳	ENERGY	1.8 Joule max
長度	596 公釐	LENGTH	596 mm
重量	2000 克	WEIGHT	2000 g
適用彈匣	AAKCCM07	MAGAZINE	AAKCCM07

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
SINCE 1978 www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL : +886-6-2798175 FAX : +886-6-2798176 sales@kwcgun.com

操作/OPERATION

1. 取出彈匣 RELEASE MAGAZINE




- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine directly falling on ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出旋塞後, 置入小鋼瓶B, 再以順時針方向鎖緊旋塞A。當刺破鋼瓶出氣時, 請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

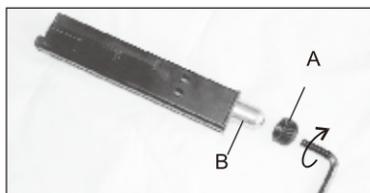

- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBS


彈匣最多可裝39發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
BB's max capacity is 39 rounds. If you load more than this quantity, you would bring any abnormal problems.

4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身上推入, 直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”

5. B.B彈上膛 CHAMBERING THE BBS

將上蓋往後拉到底, 放開拉柄則拉柄會自動回位, 同時亦將B.B彈送上膛完成射擊準備。
Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.

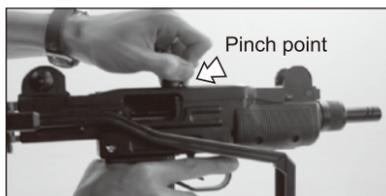

- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 單/連發和保險切換 SWITCH SEMI AUTO AND FULL AUTO



A: 連續射擊 R: 單發射擊 S: 關保險
A: Full auto R: Semi auto S: Safety

7. 握柄保險 GRIP SAFETY



- ▲ 注意: 在沒有握住握柄保險的情況下, 是無法射擊的。
- ▲ CAUTION: This firearm can't be shot without holding GRIP SAFETY.

8. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger. Then the BB will be shot.

9. 前/後準星調整 ADJUSTABLE FRONT / BACK SIGHT




10. 槍托收折 STOCK



4. 槍身上下拆解 DISASSEMBLE FRAME



5. 取出外槍管 TAKE OFF OUTER BARREL

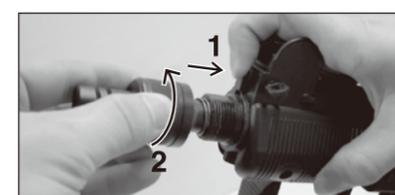

故障的原因予排除/BREAK DOWN FAQ

* 卡彈可能原因: THE REASON FOR BBS JAM:

- 裝彈排列不整齊 The BBs in the magazine does not line up very well.
- 不良B.B彈 Bad quality BBs.
- 空擊發易造成零件損耗, 請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.

將氣缸座往後拉, 清出B.B彈
Pull the cylinder back as picture and clean the BB get stuck.



保養及維護/MAINTENANCE GUIDE

每當射擊約2000發時, 建議如下圖所示, 以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。
After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.




拆解/DISASSEMBLY


1. 按下卡榫, 取出彈匣 Press the magazine catch to release the magazine.



2. 取出上蓋 TAKE OFF SLIDE

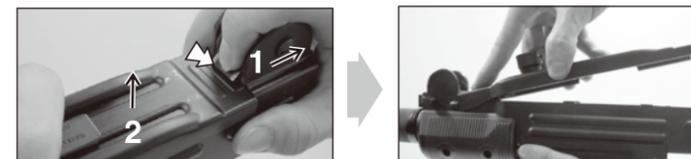

3. 取出氣缸座 TAKE OFF CYLINDER UNIT

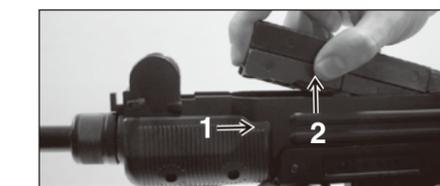

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指定的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety could fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airsoft.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airsoft.

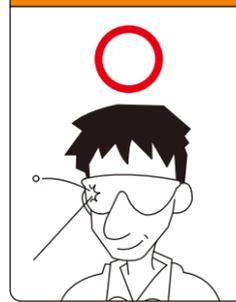

★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airsoft.

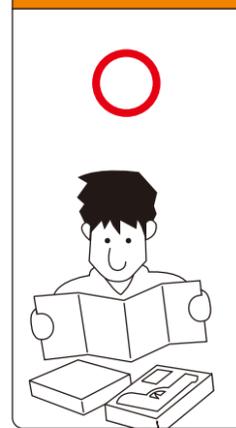


★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。
★Always transport an airsoft in a locked carrying case. Make sure it is unloaded and on safe.




★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.



★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or domestic animals. Brandish this airsoft in public is dangerous and may be a crime.

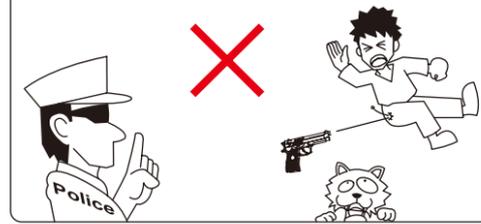

★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

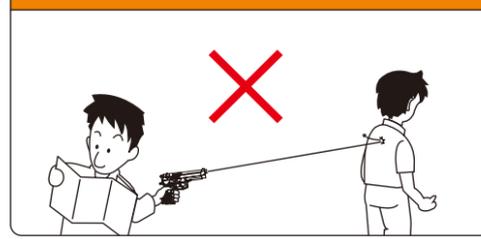

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airsoft may cause malfunction, void your warranty and may make it unsafe to use.




請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

AAKCCF07 系列 零件表 AAKCCF07 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
KCB07-P01	彈匣上部	MAGAZINE RIB	202A	氣缸本體(右)	CYLINDER (R)	S09	後背帶銷壓簧	REAR STRAP PIN SPRING
P01	本體	FRAME	203	擊槌卡榫	HAMMER CATCH	S12	握柄保險壓簧	GRIP SAFETY SPRING
P02	槍身下部	LOWER FRAME	204	槍管接筒	BARREL CONNECTOR	S13	撞針扭簧	FIRING PIN SPRING
P03	彈匣滑粒	MAGAZINE FOLLOWER	205	本體固定件	FRAME FIXTURE	S18	擊鎚卡榫扭簧	HAMMER CATCH SPRING
P04	彈匣底座定位件	MAGAZINE BASE LOCATOR	206	氣缸後配件	REAR CYLINDER ACCESSORY	S19	扳機扭簧	TRIGGER SPRING
P05	槍管卡榫	BARREL CATCH	301D	氣缸	CYLINDER	S20	心棒壓簧	VALVE SPRING
P07	槍柄(左)	GRIP (L)	302B	射嘴壓簧導件	LOADING NOZZLE SPRING GUIDE	S21	防雙連彈扭簧	ANTI DOUBLE LOADING SPRING
P09	HOP-UP調整片	HOP UP ADJUST PLATE	304C	氣缸本體導桿	CYLINDER GUIDE	S23	彈匣壓簧	MAGAZINE SPRING
P11	護木(左)	HAND GURAD (L)	305B	氣缸本體導桿套	CYLINDER GUIDE SLEEVE	SM2	氣缸回位壓簧	CYLINDER RECOIL SPRING
P12	護木(右)	HAND GURAD (R)	306	氣缸本體固定件	CYLINDER LOCKER	SM5	氣流控制件壓簧(前)	FLOATING VALVE SPRING (FRONT)
P13	槍柄(右)	GRIP (R)	307	氣缸本體緩衝件	CYLINDER BUMPER	R01	氣嘴迫緊	GAS ROUTE PACKING
P19	槍身上蓋配件	UPPER FRAME ACCESSORY	311	射嘴回位壓簧配件	LOADING NOZZLE RECOIL SPRING GUIDE	R02	子彈迫緊 HOP-UP	RUBBER CHAMBER(HOP-UP)
P21	槍管配件	BARREL RING	324	滑套射嘴墊圈	NOZZLE RING	G008	O形環 1x6	O-RING 1x6
P22	防雙連彈扭簧配件	ANTI DOUBLE LOADING SPRING ACCESSORY	403	回位緩衝件華司	RECOIL BUFFER WASHER	G016	O形環 PU S-4 黃	O-RING PU S-4
P41	心棒迫緊	VALVE PACKING	603	射嘴回位壓簧	LOADING NOZZLE RECOIL SPRING	G027	O形環 S-15	O-RING S-15
P45	分流控制件	GAS GUIDING VALVE	605	氣缸緩衝壓簧	CYLINDER BUFFER SPRING	G032	O型環 P7	O-RING P7
KMB07-P52	氣流控制件	FLOATING VALVE	609	彈匣卡榫扭簧	MAGAZINE CATCH SPRING	G037	O形環 2x12	O-RING 2x12
P52	滑套射嘴前部	FRONT LOADING NOZZLE	C07	HOP-UP調整件壓簧	HOP-UP ADJUSTOR SPRING	G039	O形環 2x15 橘紅色	O-RING 2x15
P60	彈匣底內件	MAGAZINE BOTTOM CAP	B01	彈匣上部軸	MAGAZINE RIB PIN	F01	後準星彈片	REAR SIGHT SPRING
Z06	槍托座	STOCK BASE	B03	扳機軸	TRIGGER PIN	F04	單連發控制桿	FULL/SEMI SWITCH PLATE
Z09	前準星	FRONT SIGHT	B05	前準星定位銷	FRONT SIGHT LOCATOR PIN	F05	彈匣底座	MAGAZINE BASE
Z10	槍托	STOCK	B09	外槍管	OUTER BARREL	F06	拉柄滑件	COCKING HANDLE PLATE
Z11	撞針本體	FIRING PIN FRAME	B10	擊鎚卡榫軸	HAMMER CATCH PIN	KA11-F07	軸B(擊鎚箱)(鉸)	PIN# B-CHASSIS
Z14	彈匣卡榫	MAGAZINE CATCH	B11	內槍管	INNER BARREL	F07	保險定位彈片	SAFETY LOCATOR SPRING
Z15	後準星	REAR SIGHT	B12	後背帶銷	REAR STRAP PIN	F11	撞針	FIRING PIN
Z16	扳機	TRIGGER	B13	前背帶扣	FRONT STRAP BUCKLE	EA002	六角螺絲 M3x6.0 鍍黑熱	HEX NUT M3X6.0
Z17	扳機連動件	TRIGGER CONNECTOR	B15	彈匣卡榫軸	MAGAZINE CATCH PIN	EA007	槍柄螺絲一字 M3.0x26 黑	GRIP SCREW M3.0X26
Z22	握柄保險	GRIP SAFETY	B16	後準星螺絲	REAR SIGHT SCREW	EA035	螺絲 φM2.6x8 鍍	SCREW M2.6x8
Z26	槍管定位件	BARREL LOCATOR	B18	拉柄螺絲	COCKING HANDLE SCREW	EA072	螺絲 φM2.6x8 鍍	SCREW 2.6x8
Z27	槍管定位件配件	BARREL LOCATOR ACCESSORY	B19	槍身下部軸	LOWER FRAME PIN	EA074	螺絲 φM3x6	SCREW M3x6
Z28	槍身內套	INNER FRAME BASE	B23	扳機連動件軸	TRIGGER CONNECTOR PIN	EA081	螺絲 內六角M3x8 黑	SCREW M3x8
Z29	槍身上蓋	SLIDE	B24	後準星彈片軸	REAR SIGHT SPRING PIN	EA090	螺絲 內六角M3.0x6 黑	SCREW M3.0x6
Z30	拉柄座	COCKING HANDLE BASE	B28	氣瓶頂針	PUNCTURE VALVE	EA092	螺絲 內六角M3.0x10 黑	SCREW M3.0x10
Z31	拉柄	COCKING HANDLE	KMB07-B32	心棒後部	VALVE REAR	EA099	止付螺絲M2.0x6 黑	SET SCREW M2.0x6
Z32	前準星座	FRONT SIGHT BASE	B32	氣閥本體	VALVE FRAME	EC007	彈簧銷	SPRING PIN
Z33	單連發切換件	FULL/SEMI SWITCH	B33	心棒	VALVE	ED005	E型扣環	E-RING
Z34	上蓋卡榫	SLIDE CATCH	B215	氣瓶頂針迫緊	PUNCTURE VALVE PACKING	ED006	E型扣環	E-RING
Z35	前準星調整鈕	FRONT SIGHT ADJUST TOOL	S01	撞針定位件壓簧	FIRING PIN LOCATOR SPRING	EF007	軸(鉸)	PIN
Z36	握柄保險連桿	GRIP SAFETY BAR	S02	槍管定位件壓簧	BARREL LOCATOR ACCESSORY SPRING			
Z37	後準星螺帽	REAR SIGHT NUT	S03	槍管定位件壓簧	BARREL LOCATOR SPRING			
102	滑套射嘴後部	REAR LOADING NOZZLE	S04	前準星定位銷壓簧	FRONT SIGHT LOCATOR PIN SPRING			
107	撞針定位件	FIRING PIN LOCATOR	S05	拉柄回位拉簧	COCKING HANDLE RECOIL SPRING			
201A	氣缸本體(左)	CYLINDER (L)	S08	上蓋卡榫壓簧	SLIDE CATCH SPRING			
						U1	內槍管組件	INNER BARREL UNIT
						U2	氣閥組件	INNER VALVE UNIT
						U3	氣瓶頂針組件	PUNCTURE VALVE UNIT

AAKCCF07 系列 零件分解圖 AAKCCF07 SERIES EXPLODED VIEW

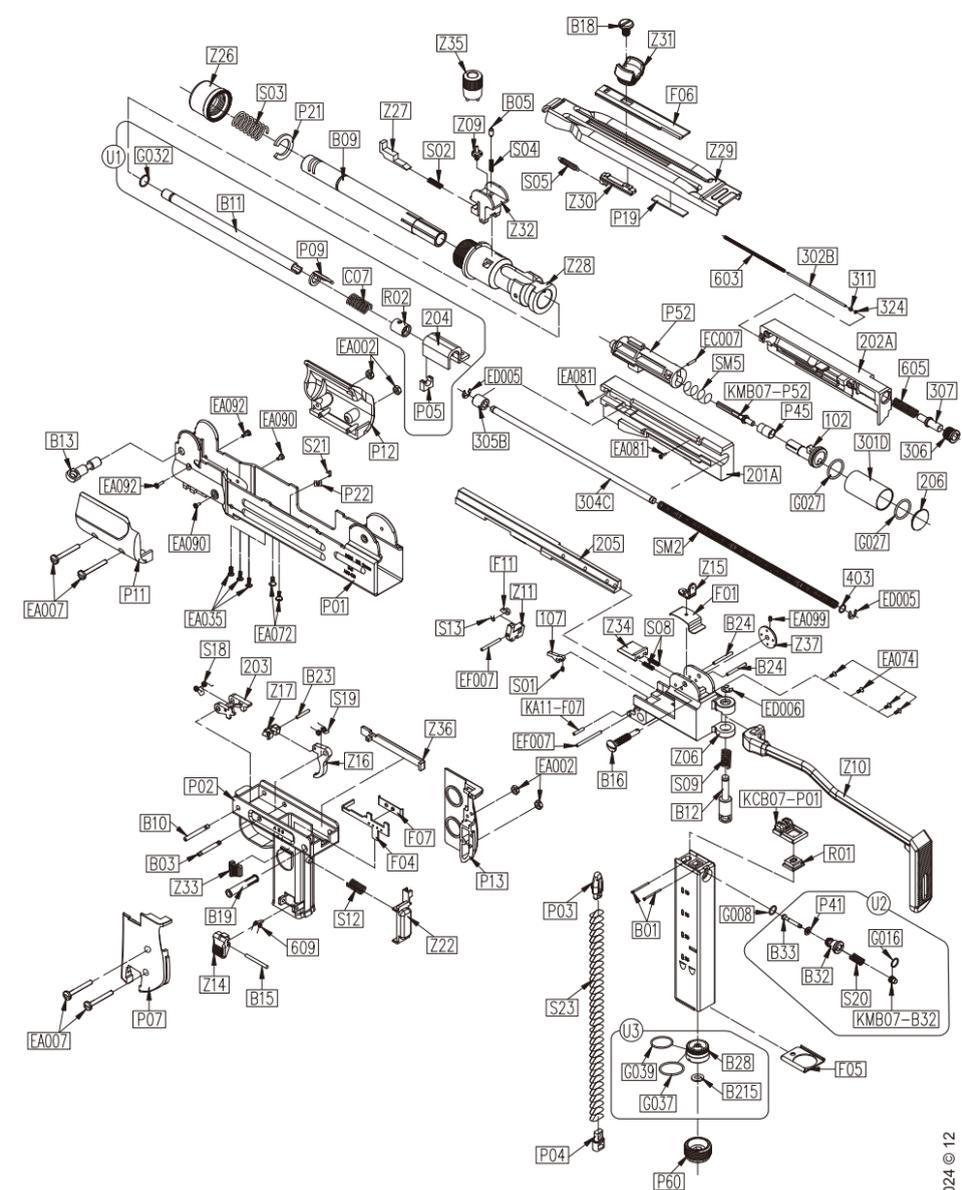

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.