




AAKCCF23 系說明書

AAKCCF23 INSTRUCTION MANUAL

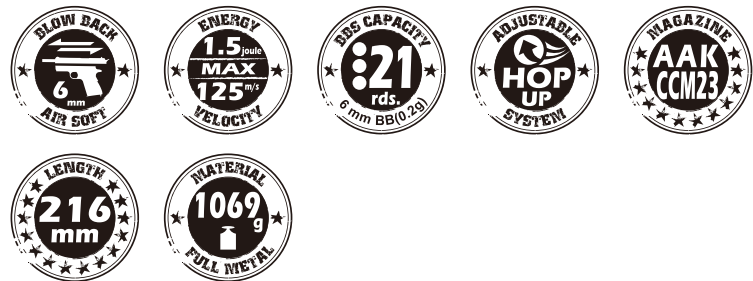

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
SINCE 1978 www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL : +886-6-2798175 FAX : +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE


- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.



2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

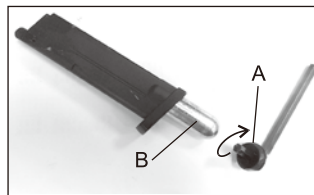


- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBs

彈匣最多可裝21顆B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。(分2種方式裝彈)

Magazine max capacity is 21 rounds. Loading more than this quantity could bring malfunctions. (BB can be loaded in two ways.)

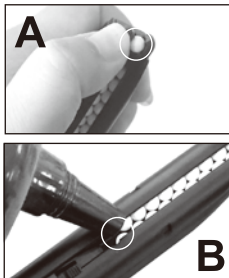

4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出“卡嗒”為止。Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B.B彈上膛 CHAMBERING THE BB


將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.

- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.




6. 保險切換 SWITCH SAFETY

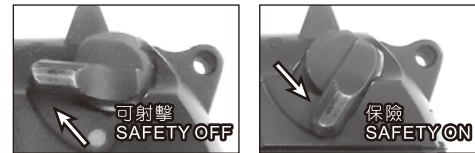

7. 關保險擊錘復位 SAFETY ON AND COCK DISCHARGE

- ▲ 注意: 擊鐵會跟著關保險回位, 所有機械機構都有失誤的可能, 在關保險擊鐵復位時也請注意將槍口朝向安全的位置。
- ▲ CAUTION: The decocker will put hammer down; however, since all mechanisms can fail, it is still necessary to keep the muzzle of the gun pointed in a safe direction while decocking.

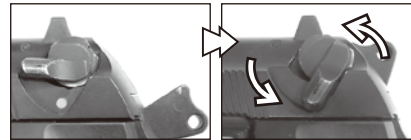

8. 單/連發切換 SWITCH SEMI AUTO AND FULL AUTO

將槍口向右在槍尾部有連發開關可以切換。

Semi auto and full auto switch on pistol rear right side.

若是你購買的槍有連發系統, 請依照下圖示操作啟動連發系統。

If your pistol has full auto function, you may also switch to full auto by instruction below.



- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

9. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。

Aim the target and pull the trigger. Then the BB will be shot.


- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.



拆解 / DIS-ASSEMBLY

1. 按下卡榫, 取出彈匣。 Press the magazine catch to release the magazine.


2. 請按住右側的上蓋卡榫件, 將左面的上蓋卡榫往下扳後鬆開上蓋。 Push L16 from the right side and spin the slide catch down to unlock the slide.

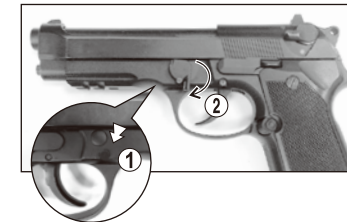

3. 往左滑出槍管, 本體和上蓋就可分離。 Slide outer barrel to the left side to separate frame and slide.



4. HOP UP調整。 Adjust HOP UP system.

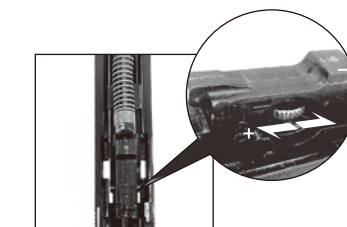


故障原因與排除 / BREAKDOWN FAQ

* 卡彈可能原因: THE REASON FOR BBS JAM:



- a. 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- b. 不良B.B彈
Bad quality BBs.
- c. 空擊發易造成零件損耗, 請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.


* 排除: 將上蓋往後拉, 向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.

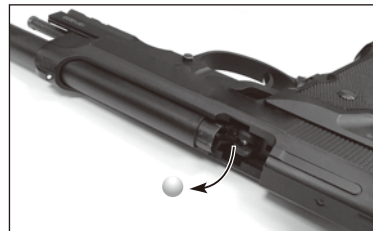

保養及維護 / MAINTENANCE GUIDE

每當射擊約2000發時, 建議如下圖所示, 以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.

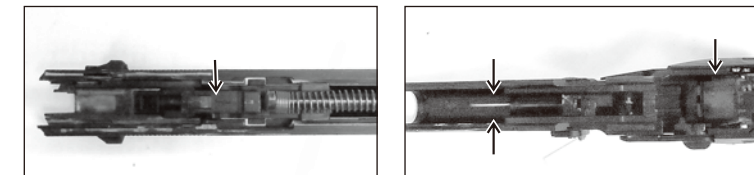



WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。


- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO₂小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO₂小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airsoft on safe and unloaded when not using.
- Like all mechanical devices, an airsoft safety could fail. Always handle the airsoft safely even when the safety is "on safe". Never point the airsoft at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airsoft out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 6 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airsoft.
- Do not expose CO₂ cartridges to heat or store them at temperatures above 50°C (122°F). CO₂ cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airsoft.

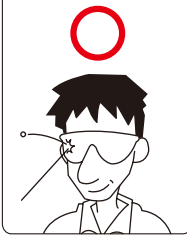

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

★When in public, always carry the airsoft in a locked carrying case or bag. Make sure it is unloaded and on safe.

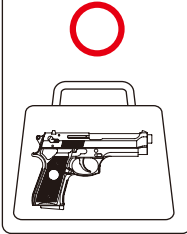

請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airsoft.



★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airsoft at any people or animals. Brandish this airsoft in public is dangerous and may be a crime.




★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

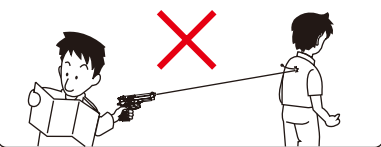

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airsoft may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



KCCF23系列 零件表 KCCF23 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P01	滑套射嘴	A01	上蓋	S08	彈匣壓簧
P02	氣流控制件	R01	氣嘴迫緊	S10	彈匣卡榫壓簧
P03	彈匣上部	KCB22-R01	子彈迫緊	S11	保險回位壓簧
P04	彈匣滑粒	KCB22-R03	氣缸迫緊	S13	擊鐵壓簧
P05	彈匣滑粒卡住配件	G007	O形環 1x5	S14	擊鐵卡榫扭簧
P08	彈匣底座配件	G008	O形環 1x6	S15	上蓋卡榫壓簧
P10	上蓋緩衝件	G016	O形環 S-4(黃)	S16	扳機扭簧
P11	氣缸迫緊配件	G038	O形環 2x13	S17	單連發選擇鈕壓簧
P13	槍柄(左)	L01	擊鐵軸套	S18	上蓋止動件扭簧
P14	槍柄(右)	KG15-L2	槍柄鎖絲	S19	擊鐵卡榫釋放壓簧
KMB07-P41	心棒迫緊	L03	擊鐵卡榫軸套	S20	調整鈕壓簧
Z01	本體	L04	擊鐵箱軸	S21	心棒壓簧
Z02	槍身內套	L05	單連發控制件壓簧	S23	氣流控制件壓簧
Z03	擊鐵箱(左)	L06	單連發切換鈕配件軸	S24	單連發切換件扭簧
Z04	擊鐵箱(右)	L07	連發控制件軸	S25	切換連桿扭簧
Z05	扳機	L08	扳機軸	EA045	Φ半丸M3x8x0.5 耐落
Z06	擊鐵	L09	擊鐵卡榫軸	EA058	ΦⅢM2xL15xP0.4
Z08	撞針	L10	擊鐵壓簧座軸(大)	EA056	ΦⅢM2xL8xP0.4
Z09	撞針卡榫	L12	彈匣上部軸	EA060	ΦⅢ2.3x5尖黑熱
Z10	上蓋卡榫	L14	內槍管	EA066	ΦⅢ2.3x8束黑熱
Z13	保險	L16	上蓋卡榫卡件	EA067	ΦⅢ2.6xL5xP0.45
Z14	連發擊鐵卡榫	L18	子彈迫緊調整件螺絲	EA072	ΦⅢM2.6x8LxP0.45
Z15	切換連桿	L20	保險定位軸	EA106	止付螺絲3.0x4 黑
Z16	單連發切換鈕配件	L21	扳機連桿扭簧軸	EB002	彈簧墊圈M3.0x0.6T
Z17	單連發切換鈕	L22	滑套射嘴軸	EC006	彈簧鋼2'x8L鍍黑
Z18	扳機連桿	L29	外槍管固定軸	ED001	E型扣環-E1.2
Z19	擊鐵壓簧座	L30	心棒	B003	鋼珠 φ2.5
Z20	上蓋止動件	L31	心棒後部	F01	擊鐵釋放件
Z21	彈匣卡榫	L32	氣閥本體	F02	擊鐵釋放件連動件
Z22	彈匣卡榫配件(左)	L35	保險片固定軸	F03	連發擊鐵卡榫連動件
Z23	彈匣卡榫配件(右)	L42	扳機軸套	F04	擊鐵壓簧導桿
Z24	背帶扣	L43	保險連動件軸	F05	保險連動件
KCB22-Z28	鋼瓶鎖緊件	L44	擊鐵壓簧座軸(小)	F06	扳機連桿固定件
Z30	彈匣本體	B01	保險左配件	F07	單發擊鐵卡榫
Z33	槍管蓋(左)	B26	氣瓶頂針		
Z34	槍管蓋(右)	KG12-B215	氣瓶頂針迫緊	X1	內槍管組件
Z36	外槍管	S02	撞針扭簧	X2	氣缸組件
Z38	子彈迫緊調整件	S03	擊鐵連桿壓簧	U1	擊鐵組件
Z39	回位導桿	S04	滑套射嘴回位壓簧	U2	氣瓶頂針組件
Z40	氣缸	S05	連發卡榫扭簧	U3	氣閥組件
Z41	保險(右)	S06	導桿回位壓簧		


零件有時為了改良而不經預告變更

KCCF23系列 零件表 KCCF23 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P01	LOADING NOZZLE	A01	SLIDE	S08	MAGAZINE SPRING
P02	FLOATING VALVE	R01	GAS ROUTE PACKING	S10	MAGAZINE CATCH SPRING
P03	MAGAZINE RIB	KCB22-R01	RUBBER CHAMBER	S11	SAFETY RECOIL SPRING
P04	MAGAZINE FOLLOWER	KCB22-R03	CYLINDER PACKING	S13	HAMMER SPRING
P05	MAGAZINE FOLLOWER CATCH	G007	O-RING 1x5	S14	HAMMER CATCH SPRING
P08	MAGAZINE BASE ACC.	G008	O-RING 1x6	S15	SLIDE CATCH SPRING
P10	SLIDE BUFFER	G016	O-RING S-4	S16	TRIGGER SPRING
P11	CYLINDER PACKING ACC.	G038	O-RING 2x13	S17	FULL/SEMI AUTO SWITCH BUTTON SPRING
P13	GRIP (L)	L01	HAMMER SLEEVE	S18	SLIDE STOPPER SPRING
P14	GRIP (R)	KG15-L2	GRIP SCREW	S19	HAMMER CATCH RELEASE SPRING
KMB07-P41	VALVE PACKING	L03	HAMMER CATCH PIN SLEEVE	S20	HOP UP ADJUST SPRING
Z01	FRAME	L04	CHASSIS PIN	S21	VALVE SPRING
Z02	INNER FRAME BASE	L05	FULL/SEMI AUTO SWITCH PLATE SPRING	S23	FLOATING VALVE SPRING
Z03	CHASSIS (L)	L06	FULL/SEMI AUTO SWITCH ACCESSORY PIN	S24	FULL/SEMI AUTO SWITCH ACCESSORY SPRING
Z04	CHASSIS (R)	L07	FULL AUTO CONTROL PIN	S25	SWITCH PLATE SPRING
Z05	TRIGGER	L08	TRIGGER PIN	EA045	SCREW M3x8x0.5
Z06	HAMMER	L09	HAMMER CATCH PIN	EA058	SCREW M2xL15xP0.4
Z08	FIRING PIN	L10	HAMMER SPRING BASE PIN (L)	EA056	SCREW M2xL8xP0.4
Z09	FIRING PIN CATCH	L12	MAGAZINE RIB PIN	EA060	SCREW 2.3x5
Z10	SLIDE CATCH	L14	INNER BARREL	EA066	SCREW 2.3x8
Z13	SAFETY	L16	SLIDE CATCH PIN	EA067	SCREW 2.6xL5xP0.45
Z14	FULL AUTO HAMMER CATCH	L18	HOP UP ADJUST SCREW	EA072	SCREW M2.6x8LxP0.45
Z15	SWITCH PLATE	L20	SAFETY LOCATOR PIN	EA106	SET SCREW 3.0x4
Z16	FULL/SEMI AUTO SWITCH PLATE ACCESSORY	L21	TRIGGER BAR SPRING PIN	EB002	SPRING WASHER M3.0x0.6T
Z17	FULL/SEMI AUTO SWITCH BUTTON	L22	LOADING NOZZLE PIN	EC006	SPRING PIN 2'x8L
Z18	TRIGGER BAR	L29	OUTER BARREL FIXTURE PIN	ED001	E-RING
Z19	HAMMER SPRING BASE	L30	VALVE	B003	BEARING
Z20	SLIDE STOPPER	L31	VALVE REAR	F01	HAMMER RELEASE
Z21	MAGAZINE CATCH	L32	VALVE FRAME	F02	HAMMER RELEASE CONNECTOR
Z22	MAGAZINE CATCH ACCESSORY (L)	L35	SAFETY PLATE FIXTURE PIN	F03	FULL AUTO HAMMER CATCH CONNECTOR
Z23	MAGAZINE CATCH ACCESSORY (R)	L42	TRIGGER SLEEVE	F04	HAMMER SPRING GUIDE
Z24	STRAP RING	L43	SAFETY CONNECTOR PIN	F05	SAFETY CONNECTOR
KCB22-Z28	MAGAZINE BOTTOM CAP	L44	HAMMER SPRING BASE PIN (S)	F06	TRIGGER BAR FIXTURE
Z30	MAGAZINE FRAME	B01	SAFETY ACCESSORY (L)	F07	SEMI AUTO HAMMER CATCH
Z33	BARREL CASE (L)	B26	PUNCTURE VALVE		
Z34	BARREL CASE (R)	KG12-B215	PUNCTURE VALVE PACKING	X1	INNER BARREL UNIT
Z36	OUTER BARREL	S02	FIRING PIN SPRING	X2	CYLINDER UNIT
Z38	HOP-UP ADJUST PLATE	S03	HAMMER BAR SPRING	U1	HAMMER UNIT
Z39	RECOIL BAR	S04	LOADING NOZZLE RECOIL SPRING	U2	PUNCTURE VALVE UNIT
Z40	CYLINDER	S05	FULL AUTO CATCH SPRING	U3	INNER VALVE UNIT
Z41	SAFETY (R)	S06	RECOIL SPRING		

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCCF23系列 零件分解圖 KCCF23 SERIES EXPLODED VIEW

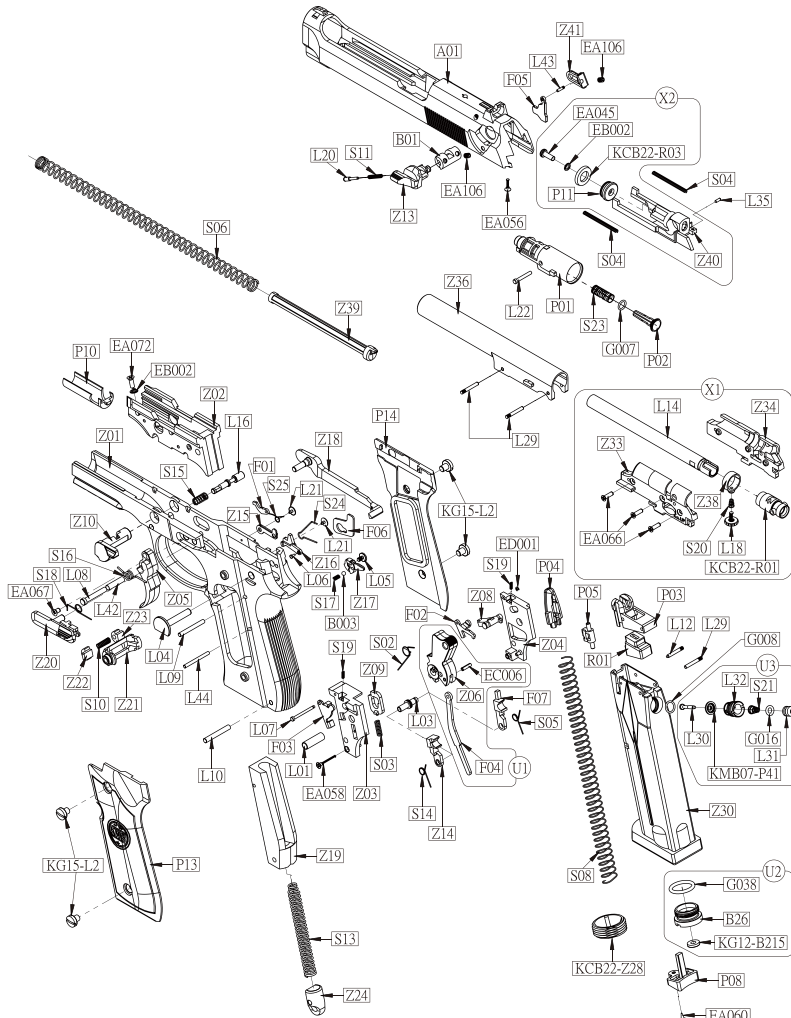

K08-00766-J1 2023 © 06