



AAKCMB44 系說明書

AAKCMB44 INSTRUCTION MANUAL



KWC KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE


- ▲ 注意:請勿使彈匣直接掉落地面,以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.



2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後,置入小鋼瓶B,再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時,請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

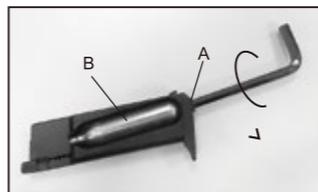

- ▲ 注意:為維護彈匣使用壽命,請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBs

為了使擊發順暢,填裝方式是讓B.B彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.



- ▲ 注意:彈匣最多可裝15發BB彈,如強行裝入更多,可能造成不當損壞及無法上膛。
- ▲ CAUTION: Magazine max capacity is 15 rounds. Loading more than this quantity could bring malfunctions.

4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入,直到彈匣卡榫發出"卡嗒"為止。
Insert fully loaded magazine in the airsoft until you hear the sound of "CLICK".

5. B.B彈上膛 CHAMBERING THE BB

將上蓋往後拉到底,放開上蓋則上蓋會自動回位,同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



6. 保險切換 SWITCH SAFETY

- ▲ 注意:必須在上膛狀態下保險才可關閉
- ▲ CAUTION: Safety can only be turned on when this airsoft is cocked.



7. 射擊 SHOOTING

對準目標區後扣下扳機,則B.B彈將被射擊出去。

Aim the target and pull the trigger. Then the BB will be shot.

- ▲ 注意:B.B彈用完時,上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.



拆解 / DIS-ASSEMBLY

1. 按下卡榫,取出彈匣。
Press the magazine catch to release the magazine.

2. 先將護弓往下拉開。
Pull down the trigger guard.

3. 固定住護弓後再向後推出滑蓋,再往上拉起上蓋即可拆解分離。
Press both side of the slide locator at the same time and push the slide.

4. 上蓋拆解分離完成。
Slide disassembly done.

注意:裝入導管壓簧時,裝入方向如圖所示。

CAUTION: When inserting the outer barrel spring, mind the direction as shown above.



故障的原因與排除 / BREAK DOWN FAQ

*卡彈可能原因: THE REASON FOR BBS JAM:

- a. 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- b. 不良B.B彈
Bad quality BBs.
- c. 空擊發易造成零件損耗,請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.



*排除:將上蓋往後拉,向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.



保養及維護 / MAINTENANCE GUIDE

當射擊約2000發時,建議你如圖所示,以矽油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑,以利滑動。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.

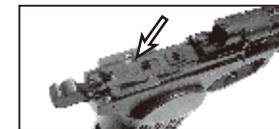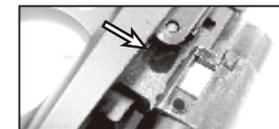

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在扳機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查彈簧物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.5mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality BB. Never use ①BB diameter larger than 4.5 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airgun.

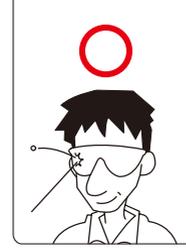

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啟保險。
★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

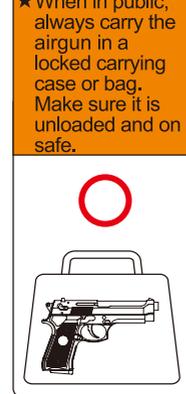

★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airgun.

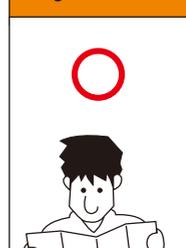


★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.



★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.



★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

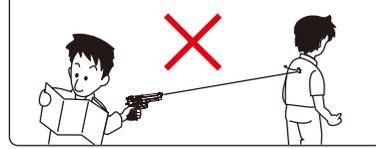

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airgun in public—it may confuse people and may be a crime.

AAKCMB44 系列 零件表 AAKCMB44 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P07	彈匣底座配件	B12	護弓壓件	S13	射嘴回位壓簧
P23	槍柄	B13	扳機軸	S16	心棒壓簧
P33	滑套射嘴	B14	彈匣卡榫軸	S17	扳機扭簧
P34	氣流控制件	B15	導管固定軸A	SM31	彈匣壓簧
P35	彈匣上部	B16	擊鐵軸套	R01	氣嘴迫緊
P41	心棒迫緊	B18	導管固定軸B	R03	HOP-UP 子彈迫緊
A02	上蓋	B19	擊鐵箱軸	G008	O形環 1x6id
Z01	本體	B20	擊鐵軸	G016	O形環 S-4
Z03	扳機	B21	止動片固定軸	G022	O形環 S-8
Z04	擊鐵卡榫	B22	連桿扭簧固定軸套	G034	O形環 P-9
Z05	撞針卡榫	B23	活套	F01	擊鐵導桿
Z06	保險左	B24	擊鐵導桿軸	F02	扳機連桿
Z07	擊鐵箱右蓋	B26	擊鐵卡榫軸套	F03	上蓋止動片
Z09	擊鐵	B27	射嘴壓簧導軸	EA021	⊕ M2.3x6 (束黑熱) 螺絲
Z11	護弓	B31	氣瓶頂針	EA045	⊕ M3.0x8 耐落 螺絲
Z12	彈匣卡榫	B30	內槍管	EA061	⊕ Ⅲ M2.3x5 (束黑熱) 螺絲
Z20	氣缸	B33	心棒	EA066	⊕ Ⅲ M2.3x8 (束黑熱) 螺絲
Z24	撞針	B34	外槍管	EA078	⊕ Ⅲ M3.0x12 黑螺絲
Z25	擊鐵箱左蓋	B215	氣瓶頂針迫緊	EA087	內六角螺絲
Z26	擊鐵箱中蓋	S01	擊鐵壓簧	EA112	內六角止付螺絲
Z36	彈匣滑粒	S02	撞針扭簧	E08	內六角止付螺絲
Z38	槍管右蓋	S03	彈匣卡榫扭簧	EB002	彈簧墊圈
Z39	槍管左蓋	S05	擊鐵卡榫扭簧	X1	氣缸組件
Z48	彈匣本體	S06	止動片扭簧	U1	內槍管組件
B03	護弓軸	S07	扳機連桿右扭簧	U2	擊鐵箱組件
B04	扳機連桿軸	S08	氣流控制件壓簧	U3	氣閥組件
B05	彈匣上部軸	S09	保險扭簧	U4	氣瓶頂針組件
B07	氣閥本體	S10	槍柄扣環		
B08	心棒後部	KCB76-S10	撞針卡榫壓簧		
		S11	導管壓簧		
		S12	護弓壓件壓簧		

AAKCMB44 系列 零件表 AAKCMB44 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P07	MAGAZINE BASE ACC.	B12	TRIGGER GUARD PRESS UNIT	S13	LOADING NOZZLE RECOL SPRING
P23	REAR GRIP	B13	TRIGGER PIN	S16	VALVE SPRING
P33	LOADING NOZZLE	B14	MAGAZINE CATCH PIN	S17	TRIGGER SPRING
P34	FLOATING VALVE	B15	BARREL FIXTURE A	SM31	MAGAZINE SPRING
P35	MAGAZINE RIB	B16	HAMMER SLEEVE	R01	GAS ROUTE PACKING
P41	VALVE PACKING	B18	BARREL FIXTURE B	R03	RUBBER CHAMBER
A02	SLIDE	B19	CHASSIS PIN	G008	O-RING 1x6id
Z01	FRAME	B20	HAMMER PIN	G016	O-RING S-4
Z03	TRIGGER	B21	SLIDE STOPPER FIXTURE PIN	G022	O-RING S-8
Z04	HAMMER CATCH	B22	TRIGGER BAR SPRING FIXTURE SLEEVE	G034	O-RING P-9
Z05	FIRING PIN CATCH	B23	PISTON	F01	HAMMER STRUT
Z06	SAFETY(L)	B24	HAMMER STRUT PIN	F02	TRIGGER BAR
Z07	CHASSIS-RIGHT	B26	HAMMER CATCH PIN SLEEVE	F03	SLIDE STOPPER
Z09	HAMMER	B27	FLOATING NOZZLE SPRING PIN	EA021	SCREW M2.3x6
Z11	TRIGGER GUARD	B31	PUNCTURE VALVE	EA045	SCREW M3.0x8
Z12	MAGAZINE CATCH	B30	INNER BARREL	EA061	SCREW M2.3x5
Z20	CYLINDER	B33	VALVE	EA066	SCREW M2.3x8
Z24	FIRING PIN	B34	OUTER BARREL	EA078	SCREW M3.0x12
Z25	CHASSIS-LEFT	B215	PUNCTURE VALVE PACKING	EA087	SOCKET SCREW
Z26	CHASSIS-CENTER	S01	HAMMER SPRING	EA112	MAGAZINE BOTTOM CAP
Z36	MAGAZINE FOLLOWER	S02	FIRING PIN SPRING	E08	MAGAZINE BOTTOM CAP
Z38	BARREL CASE(R)	S03	MAGAZINE CATCH SPRING	EB002	SPRING WASHER
Z39	BARREL CASE(L)	S05	HAMMER CATCH SPRING	X1	CYLINDER UNIT
Z48	MAGAZINE FRAME	S06	SLIDE STOPPER SPRING	U1	INNER BARREL UNIT
B03	TRIGGER GUARD PIN	S07	TRIGGER BAR RIGHT SPRING	U2	CHASSIS UNIT
B04	TRIGGER BAR AXLE	S08	FLOATING VALVE SPRING	U3	INNER VALVE UNIT
B05	MAGAZINE RIB PIN	S09	SAFETY SPRING	U4	PUNCTURE VALVE UNIT
B07	VALVE FRAME	S10	GRIP BUCKLE		
B08	VALVE REAR	KCB76-S10	FIRING PIN CATCH SPRING		
		S11	OUTER BARREL SPRING		
		S12	TRIGGER GUARD PRESS SPRING		

AAKCMB44 系列 零件分解圖 AAKCMB44 SERIES EXPLODED VIEW

