 




AAKCMB46系說明書

AAKCMB46 INSTRUCTON MANUAL

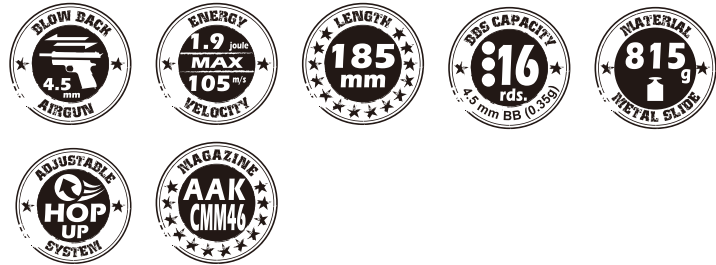

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
SINCE 1972 www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL : +886-6-2798175 FAX : +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE

- ▲ 注意:請勿使彈匣直接掉落地面,以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

 


2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後,置入小鋼瓶B,再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時,請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.


- ▲ 注意:為維護彈匣使用壽命,請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

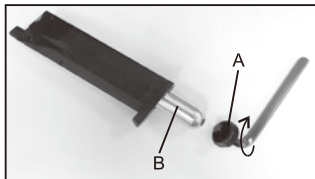

3. 填裝B.B彈 LOADING

彈匣最多可裝16顆B.B彈,如強行裝入更多,可能造成不當損壞及無法上膛,請注意。(分2種方式裝彈)

 Magazine max capacity is 16 rounds. Loading more than this quantity could bring malfunctions. (BB can be loaded in two ways.)

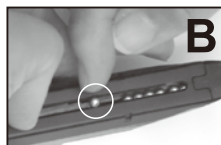

4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入,直到彈匣卡榫發出"卡嚓"為止。
Insert fully loaded magazine in the airsoft until you hear the sound of "CLICK".

5. B.B彈上膛 CHAMBERING THE BB

 
將上蓋往後拉到底,放開上蓋則上蓋會自動回位,同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲ 注意:拉動上蓋時,請勿將手指扣住扳機,以免發生不當射擊,造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.

6. 保險切換 SWITCH SAFETY

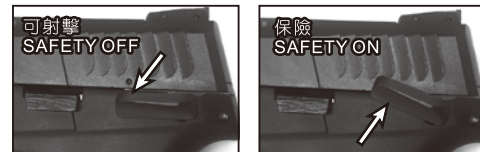

- ▲ 注意:上蓋滑動時,注意縫隙夾到手指。
- ▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.



7. 射擊 SHOOTING

 
對準目標區後扣下扳機,則B.B彈將被射擊出去。
Aim the target and pull the trigger. Then the BB will be shot.

- ▲ 注意:B.B彈用完時,上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.




拆解 / DIS-ASSEMBLY

- 按下卡榫,取出彈匣。
Press the magazine catch to release the magazine.
- 上膛。
Chambering
- 按下上蓋卡定位件,上蓋往前推。
Press both side of the slide locator at the same time and push the slide.
- 上蓋組件往前推就可分離本體與上蓋。
The slide unit will separate from frame unit after pushed out front.
- HOP UP 調整。
adjust HOP UP system.

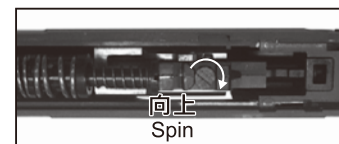

替換槍柄 / GRIP EXCHANGE

 - 將插銷取出
Pull out the pin between grip and magazine with tools.
- 槍柄握把向右拆除,以替換其他握柄。
Take out the grip and change to other type.

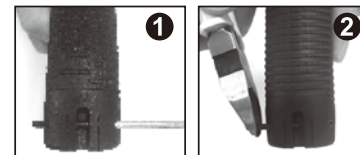

故障的原因與排除 / BREAK DOWN FAQ

*卡彈可能原因:
THE REASON FOR BBS JAM:

- 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- 不良B.B彈
Bad quality BBs.
- 空擊發易造成零件損耗,請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.

 
*排除:將上蓋往後拉,向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.



保養及維護 / MAINTENANCE GUIDE

當射擊約2000發時,建議你如圖所示,以矽油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑,以利滑動。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.

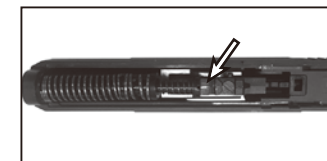

!

WARNING 警告

請務必嚴格遵守使用說明指導書

READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

1.除了發射時外，不要將手指頭掛在鈞機上。

2.選擇安全與適當標靶。

3.在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。

4.如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。

5.千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。

6.請妥善保管產品在未成年孩童無法伸手取得的場所。

7.每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。

8.請使用高品質BB彈，請勿使用①口徑大於4.5mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。

9.最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。

10.檢查任何掉落之槍枝，以確保未影響其功能。

This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

1.Do not put your finger on the trigger except shooting.

2.Please choose safe and proper target.

3.Please always keep the airgun on safe and unloaded when not using.

4.Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.

5.To avoid ricochet. Never shoot at a hard or flat surface or at water.

6.Keep the airgun out of reach for underage children.

7.Your backstop should be inspected for worn out before and after each use.

8.Discontinue use of the backstop if surface shows signs of failure or ricochet.

 
8.Only use high quality BB. Never use ①BB diameter larger than 4.5 mm ②BB with unsmoothed surface ③ reused BB that has been fired ④ incorrect projectiles not design for this airgun.

9.Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).

10.Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

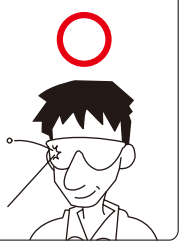


★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啟保險。

 ★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.

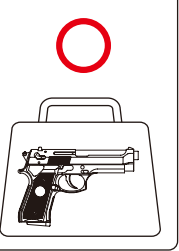


★使用低動能遊戲用槍前，請務必詳讀說明書內容。

 ★Read the owner's manual before using the airgun.

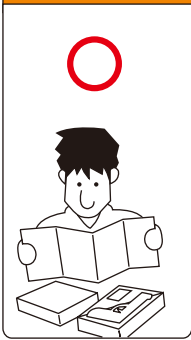


★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

 ★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.

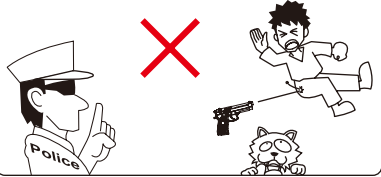

★請確認後再發射BB彈方向，附近無人或動物存在。

 ★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

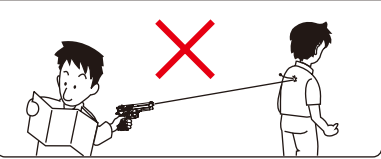


★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.



★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。

Do not display this airgun in public—it may confuse people and may be a crime.

AAKCMB46 系列 零件表					
AAKCMB46 SERIES PARTS LIST					
NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P01	本體	Z24	彈匣滑粒 4.5mm	B30	氣缸配件軸
P02	內槍管定位件 4.5mm	Z26	彈匣本體 4.5mm	KG12-B215	氣瓶頂針迫緊
P03	內槍管配件 4.5mm	Z27	擊鐵箱	KCB22-L45	回位導桿螺絲
P06	後準星	Z28	槍身內套	S01	擊鐵卡桿扭簧
P07	後準星罩門	KCB22-Z28	鋼瓶鎖緊件	SM1	彈匣壓簧 4.5mm
KG15-P08	氣缸迫緊	Z29	外槍管 4.5mm	SM2	鈹機扭簧
		Z30	氣缸配件	SM3	擊鐵扭簧
		F01	上蓋止動片	S03	上蓋止動片扭簧
		KA27-F03	槍號	S04	彈匣卡桿壓簧
				S05	回位導桿壓簧
P09	彈匣底座配件	R01	氣嘴迫緊	S06	射嘴回位壓簧
P10	鈹機	KMB23-R01	子彈迫緊 4.5mm	S07	氣流控制件壓簧
P11	鈹機配件	G008	O形環 1X6 (氣閥用)	S09	回位導桿緩衝壓簧
P12	滑套射嘴	G016	O形環 PU S-4	S10	撞針卡桿壓簧
P14	彈匣上部 4.5mm	G026	O形環 S12.5	S11	鈹機連桿回位扭簧
P15	槍柄(S)			S12	撞針拉簧
P16	槍柄(M)	B02	槍身內套軸	S13	上蓋定位件壓簧
P17	槍柄(L)	B03	回位導桿	S15	子彈迫緊調整螺絲壓簧
P18	回位導桿外桿	B04	彈匣卡桿軸	S17	鈹機配件壓簧
P19	回位導桿前配件	B06	鈹機配件軸	KG15-S20	心棒壓簧
P20	回位導桿墊片	B07	擊鐵箱固定軸	S21	導桿緩衝壓簧
P21	氣流控制件 4.5mm	B08	擊鐵卡桿軸	S22	後準星固定軸壓簧
KMB07-P41	心棒迫緊	B09	上蓋定位件軸	S23	保險定位壓簧
		B11	後準星螺絲固定軸	S24	氣缸配件扭簧
		B12	後準星罩門螺絲		
		B13	子彈迫緊調整螺絲	E06	2mm 鋼珠
		B14	擊鐵軸套	EA045	ΦM3.0X8 鍍銀/耐落處理
		B15	回位導桿前端螺絲	EA064	Φ血 2.3X6束黑熱(槍管左右用)
		B16	撞針拉簧軸	EA074	Φ血 M3X6 黑
		KCB48-B17	氣閥本體	E100	止付螺絲 M2.5X6 黑(前準星用)
		KCB48-B18	心棒後部	EB002	彈簧墊圈
		KCB48-B19	擊鐵軸套	EF010	軸(擊鐵箱)
		B22	鈹機軸套		
		KCB48-B22	射嘴壓簧導軸	X1	內槍管組件
		B24	彈匣上部軸(短)	X2	氣缸組件
		B25	彈匣上部軸(長)	U1	鈹機組件
		KCB23-B26	氣瓶頂針	U2	擊鐵組件
		KCB48-B27	心棒	U3	氣閥組件
		B27	內槍管 4.5mm	U4	氣瓶頂針組件
		B28	定位軸		
		B29	保險定位軸		


零件有時為了改良而不經預告變更

AAKCMB46 系列 零件表					
AAKCMB46 SERIES PARTS LIST					
NO.	UNIT	NO.	UNIT	NO.	UNIT
P01	FRAME	Z24	MAGAZINE FOLLOWER	B30	CYLINDER ACCESSORY PIN
P02	INNER BARREL GUIDE	Z26	MAGAZINE FRAME	KG12-B215	PUNCTURE VAVLE PACKING
P03	INNER BARREL FITTING	Z27	CHASSIS	KCB22-L45	RECOIL BAR SCREW
P06	REAR SIGHT	Z28	FRAME BARREL BASE	S01	HAMMER CATCH SPRING
P07	REAR SIGHT COVER	KCB22-Z28	MAGAZINE BOTTOM CAP	SM1	MAGAZINE SPRING
KG15-P08	CYLINDER PACKING	Z29	OUTER BARREL	SM2	TRIGGER SPRING
		Z30	CYLINDER ACCESSORY	SM3	HAMMER SPRING
		F01	SLIDE STOPPER	S04	SLIDE STOPPER SPRING
		KA27-F03	SERIAL NUMBER PLATE	S03	MAGAZINE CATCH SPRING
				S05	RECOIL BAR SPRING
P09	MAGAZINE BASE ACCESSORY	R01	GAS ROUTE PACKING	S06	LOADING NOZZLE RECOIL SPRING
P10	TRIGGER	KMB23-R01	RUBBER CHAMBER	S07	FLOATING VALVE SPRING
P11	TRIGGER ACCESSORY	G008	O-RING 1X6	S09	RECOIL BAR BUFFER SPRING
P12	LOADING NOZZLE	G016	O-RING PU S-4	S10	FIRING PIN CATCH SPRING
P14	MAGAZINE RIB	G026	O-RING S12.5	S11	TRIGGER BAR RECOVER SPRING
P15	GRIP (S)			S12	FIRING PIN SPRING
P16	GRIP (M)	B02	PIN-FRAME BARREL BASE	S13	SLIDE LOCATOR SPRING
P17	GRIP (L)	B03	RECOIL BAR	S15	RUBBER CHAMBER ADJUST SCREW SPRING
P18	RECOIL BAR OUTER SLEEVE	B04	MAGAZINE CATCH PIN	S17	TRIGGER ACCESSORY SPRING
P19	RECOIL BAR FRONT ACCESSORY	B06	TRIGGER ACCESSORY PIN	KG15-S20	VALVE SPRING
P20	RECOIL BAR GASKET	B07	CHASSIS SET PIN	S21	RECOIL BAR BUMPER SPRING
P21	FLOATING VALVE	B08	HAMMER CATCH PIN	S22	REAR SIGHT SET AXLE SPRING
KMB07-P41	VALVE PACKING	B09	SLIDE LOCATOR PIN	S23	SAFETY LOCATOR SPRING
		B11	REAR SIGHT SCREW SET PIN	S24	CYLINDER ACCESSORY SPRING
		B12	REAR SIGHT COVER SCREW		
		B13	HOP UP ADJUST SCREW	E06	2MM BEARING
A01	SLIDE	B14	HAMMER SLEEVE PIN	EA045	SCREW M3.0X8
Z02	CYLINDER BASE	B15	RECOIL BAR FRONT SCREW	EA064	SCREW 2.3X6
Z03	SAFETY (R)	B16	FIRING PIN SPRING AXLE	EA074	SCREW M3X6
Z04	SAFETY (L)	KCB48-B17	VALVE FRAME	E100	SET SCREW M2.5X6
Z05	MAGAZINE CATCH	KCB48-B18	VALVE REAR	EB002	SPRING WASHER
Z06	MAGAZINE CATCH ACCESSORY	KCB48-B19	HAMMER SLEEVE	EF010	PIN(CHASSIS)
Z07	SAFETY STOPPER	B22	TRIGGER SLEEVE		
Z08	BARREL LOCATOR (L)	KCB48-B22	NOZZLE SPRING GUIDE PIN	X1	INNER BARREL UNIT
Z09	BARREL LOCATOR (R)	B24	MAGAZINE RIB PIN(S)	X2	CYLINDER UNIT
Z11	PIN-REAR SIGHT ADJUSTMENT SCREW	B25	MAGAZINE RIB PIN(L)	U1	TRIGGER UNIT
Z12	HOP-UP ADJUST PLATE	KCB23-B26	PUNCTURE VAVLE	U2	HAMMER UNIT
Z13	HAMMER	KCB48-B27	VALVE	U3	VALVE UNIT
Z14	HAMMER CATCH	B27	INNER BARREL	U4	PUNCTURE VAVLE UNIT
Z15	FIRING PIN	B28	LOCATOR PIN		
Z16	FIRING PIN CATCH	B29	SAFETY LOCATOR PIN		
Z17	TRIGGER BAR				
Z19	SLIDE LOCATOR				
Z20	FRONT SIGHT				
Z21	SLIDE COVER				
Z23	REAR SIGHT SCREW				

Spare parts may be modified for quality improvement and such modification may be without advance notice.

AAKCMB46 系列 零件分解圖

 AAKCMB46 SERIES EXPLODED VIEW

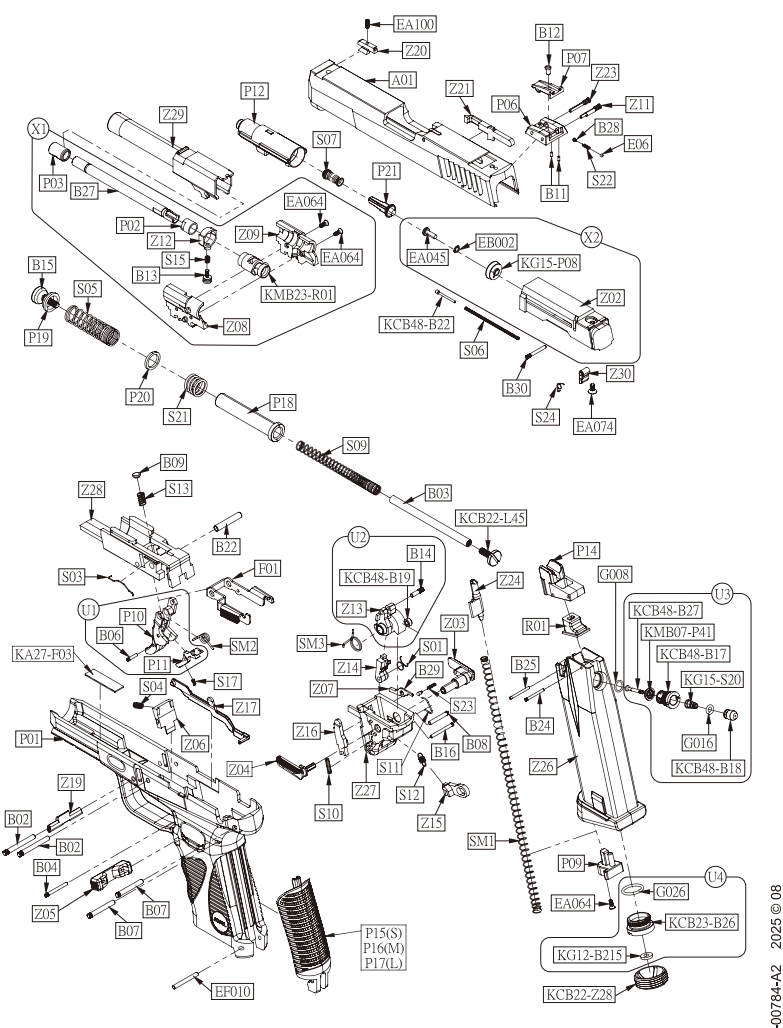

K08-00784-A2 2025 © 08