



AAKCMB88/89 系列說明書 AAKCMB88/89 INSTRUCTION MANUAL

KWC KIENTOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com



操作/OPERATION

操作說明


OPERATION

1. 取出彈匣
RELEASE MAGAZINE.



- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用
INSTALLING 12G CO2 CARTRIDGE
逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。
Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

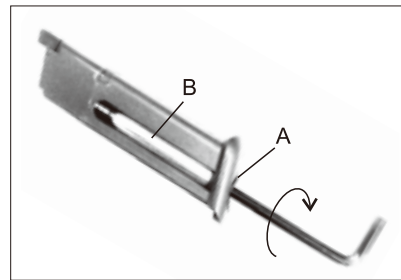

- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈
LOADING BB BULLET
為了使擊發順暢, 填裝方法是讓B.B彈在彈匣中一粒接著一粒。
For smoothly shooting, load the BBs one pellet by one pellet.



- ▲ 注意: 彈匣最多可裝 17 發 B.B 彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
- ▲ CAUTION: BB's max capacity is 17 rounds. If you load more than this quantity, you would bring any abnormal problems.

4. 彈匣上膛
INSERTING THE MAGAZINE
將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出“卡嗒”為止。
Put on the magazine with full of BBs until sound "CLICK".

5. B.B彈上膛
CHAMBERING THE BB
將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。
Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換
SWITCH SAFETY





- ▲ 注意: 必須在上膛狀態下保險才可關閉
- ▲ CAUTION: Safety can only be turned on when this airsoft is cocked.



- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. KMB-88後準星調整
KMB-88 Rear sight adjustment

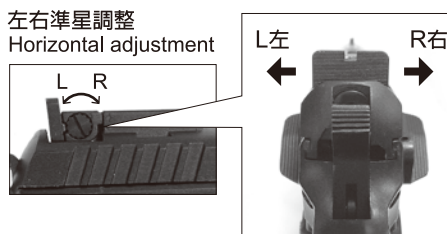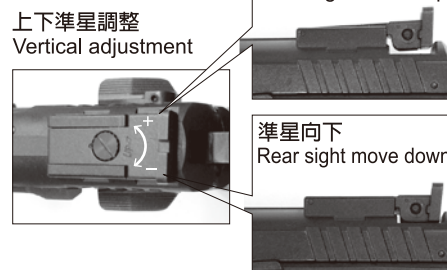


8. 射擊
SHOOTING
對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger to shoot.



- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: hold open function as real pistol.

拆解/DIS-ASSEMBLY

1. KMB-89系列
需先卸下鏡橋, 以方便拆解
Please take off the mount on KMB 89 before disassemble the gun

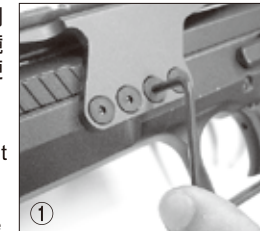

2. 按下卡榫, 取出彈匣
Press the magazine catcher to release the magazine
3. 退上蓋至導管卡榫
Pull the Slide Stop until the slide stop lock the slide




4. 壓下槍身右面卡榫
Press the pin on the right side of frame.



故障/BREAK DOWN

5. 導管卡榫左面往上推, 上蓋即可取出
Push the Slide Stop from left side of pistol to take off the Slide.

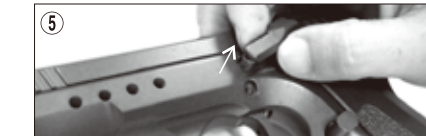

6. HOP UP調整 adjust HOP UP system.




故障的原因與排除 BREAK DOWN FAQ

- * 卡彈可能原因:
the reason for BB jam :
- a. 裝彈排列不整齊
the BB in the magazine does not arrange very well.
- b. 不良B.B彈
bad quality BB
- c. 空擊發易造成零件損耗, 請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.



- * 排除: 將上蓋往後拉, 向下倒出即可。
elimination: pull the slide back and pour the BB out from slide.

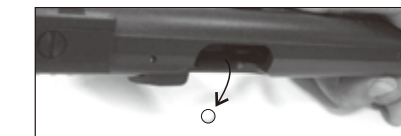

- * 射擊過程中偶而會發生, 在作動時上蓋突然停止無法作動, 而擊鐵回到原位, 彈匣中仍有足夠瓦斯和B.B彈。
In the shooting, sometimes you will meet with Slide and Hammer Stopping unexpectedly.



- * 排除: 此時並非故障, 只需重新上膛便可繼續使用。
SOLUTION: This is not the failure. Just reload it and operate again.

- * 保養及維護
MAINTENANCE GUIDE

- 當射擊約2000發時, 建議你如圖所示, 以KWC出品之矽油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑, 以利滑動。
We recommend you to use the KWC's lube oil to spray into the position as picture such as firing pin and track when you shoot the gun over 2,000 BB pellets.



⚠️ WARNING 警告

請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C (122°F) 以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。


This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

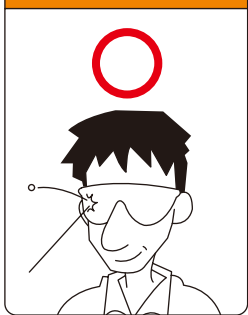

★使用低動能遊戲用槍前，請務必詳讀說明書內容。

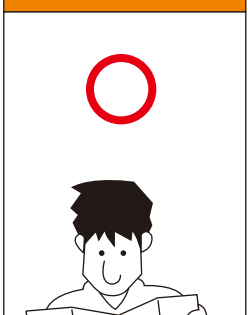


★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。




★請不要由槍口向內探視。




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

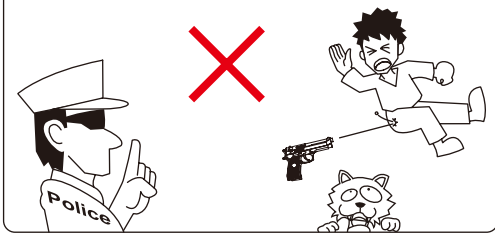

★請確認後再發射BB彈方向，附近無人或動物存在。

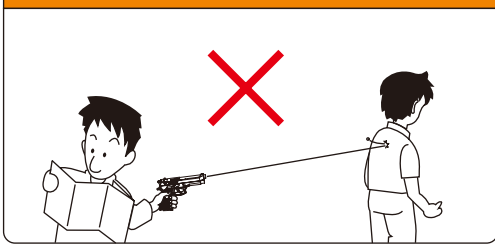

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

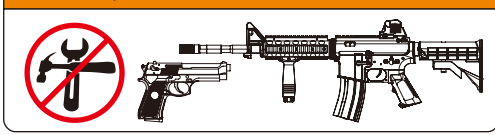


Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

AAKCMB88 / 89 系列 零件表
AAKCMB88 / 89 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
P03	滑套射嘴	LOADING NOZZLE	Z57	槍管導桿(CZ75)短-88用	RECOIL GUIDE LEVEL (88)	S09	回位壓簧	RECOIL SPRING
P12	彈匣底座配件	MAGAZINE BASE JOINT	Z58	導桿套	RECOIL BAR CAP	S10	撞針卡桿壓簧	FIRING PIN CATCH SPRING
P16	KMB氣流控制件	FLOATING VALVE				S12	心棒壓簧	VALVE SPRING
P21	彈匣卡桿固定件	MAGAZINE CATCH JOINT	F01	擊鐵壓簧導桿	HAMMER SPRING BAR	S14	保險壓簧	SAFETY SPRING
P32	槍管固定件4.5mm	BARREL CATCH	F03	扳機連桿	TRIGGER BAR	S19	氣流控制件壓簧	FLOATING VALVE SPRING
P43	彈匣上部 4.5mm	MAGAZINE RIB	F06	回位導桿華司	RECOIL BAR WASHER	S21	後準星壓簧	REAR SIGHT SPRING
P60	彈匣底內件	MAGAZINE BOTTOM CAP				S22	後準星左右調整壓簧	REAR SIGHT ADJUST SPRING (L&R)
P61	心棒迫緊	VALVE PACKING	R01	氣嘴迫緊	GAS ROUTE PACKING	S25	導桿緩衝壓簧	RECOIL BAR BUMPER SPRING
P68	氣缸迫緊	BREECH PACKING	R03	子彈迫緊(4.38)	RUBBER CHAMBER			
			R06	O型環 S-4(PU90)	O-RING	E02	螺絲 ㊦M3x8xP0.5	SCREW
A01	上蓋	SLIDE	R07	O型環 1X6id(NBR)	O-RING	E03	內六角螺絲 M3x10LxP0.5 黑	SCREW
			R09	O型環 2X15	O-RING	E04	彈簧墊圈M3.0x0.6T	SPRING WASHER
Z01	擊鐵箱右蓋	CHASSIS (R)				E05	彈簧梢2.5*8	SCREW
Z02	本體	FRAME	B02	扳機軸	TRIGGER PIN	E06	螺絲 ㊦x2.3x6(束黑熱)	SCREW
Z03	擊鐵卡桿	HAMMER CATCH	B03	保險軸	SAFETY PIN	E08	螺絲 ㊦x2.3x8(束黑熱)	SCREW
Z05	撞針卡桿	FIRING PIN CATCH	B04	止動片扭簧軸	SLIDE CATCH SPRING PIN	E09	內六角止付螺絲 M3x3LxP0.5 黑	SCREW
Z07	上蓋止動片	SLIDE CATCH	B05	擊鐵箱軸	CHASSIS PIN	E11	螺絲 ㊦x2.3x5(束黑熱)	SCREW
Z08	擊鐵	HAMMER	B06	射嘴壓簧導軸	FLOATING NOZZLE SPRING SLEEVE	E12	鋼珠1.0	STEEL BALL
Z09	扳機	TRIGGER	B11	擊鐵軸	HAMMER PIN	E15	內六角螺絲 M4x8LxP0.7 黑	SCREW
Z10	保險釋放件	SAFETY RELEASE	B17	氣閥本體	VALVE FRAME	E16	碟型墊圈M4x0.4T 黑	SPRING WASHER
Z11	彈匣卡桿	MAGAZINE CATCH	B20	內槍管	INNER BARREL	U1	六角扳手	WRENCH
Z20	氣缸	BREECH	B22	彈匣上部軸	MAGAZINE RIB PIN	U2	彈匣組件	MAGAZINE SET
Z23	前準星	FRONT SIGHT	B30	氣瓶頂針	INNER VALVE	U3	氣閥組件	VALVE SET
Z24	撞針	FIRING PIN	B33	心棒	VALVE	U4	氣瓶頂針組件	INNER VALVE SET
Z25	擊鐵箱左蓋	CHASSIS (L)	B85	後準星上下調整螺絲	REAR SIGHT ADJUST SCREW(UP & DOWN)	U5	擊鐵箱組件	CHASSIS SET
Z26	擊鐵箱中蓋	CHASSIS (M)	B86	後準星左右調整螺絲	REAR SIGHT ADJUST SCREW(R & L)	U6	後準星組件	REAR SIGHT SET
Z32	槍管導管	OUTER BARREL	B87	後準星座軸	REAR SIGHT BASE PIN	U7	擊鐵組件	HAMMER SET
Z37	槍管左蓋 4.5mm	BARREL TOW(L)	B215	氣瓶頂針迫緊	INNER VALVE PACKING	U8	扳機組件	TRIGGER SET
Z38	槍管右蓋 4.5mm	BARREL TOW (R)						
Z41	彈匣(4.5mm)	MAGAZINE FRAME	S01	彈匣壓簧	MAGAZINE SPRING	X1	汽缸半組件	BREECH SET
Z45	保險左	SAFETY (L)	S02	射嘴回位壓簧	FLOATING RECOIL SPRING	X2	內槍管組件	INNER BARREL SET
Z46	KCB79保險右	SAFETY (R)	S03	彈匣卡桿扭簧	MAGAZINE CATCH SPRING			
Z48	彈匣滑粒4.5	MAGAZINE FOLLOWER	S04	止動片扭簧	SLIDE CATCH SPRING			
Z49	後準星	REAR SIGHT	S05	擊鐵壓簧	HAMMER SPRING			
Z50	後準星罩門	REAR SIGHT COVER	S06	擊鐵卡桿扭簧	HAMMER CATCH SPRING			
Z51	槍柄座(CZ75)	GRIP BASE	S07	撞針扭簧	FIRING PIN SPRING			
Z52	槍柄左(CZ75)	GRIP (L)	S08	扳機連桿拉簧	TRIGGER BAR SPRING			
Z53	槍柄右(CZ75)	GRIP (R)						

AAKCMB88 / 89 系列 零件分解圖
AAKCMB88 / 89 SERIES EXPLODED VIEW

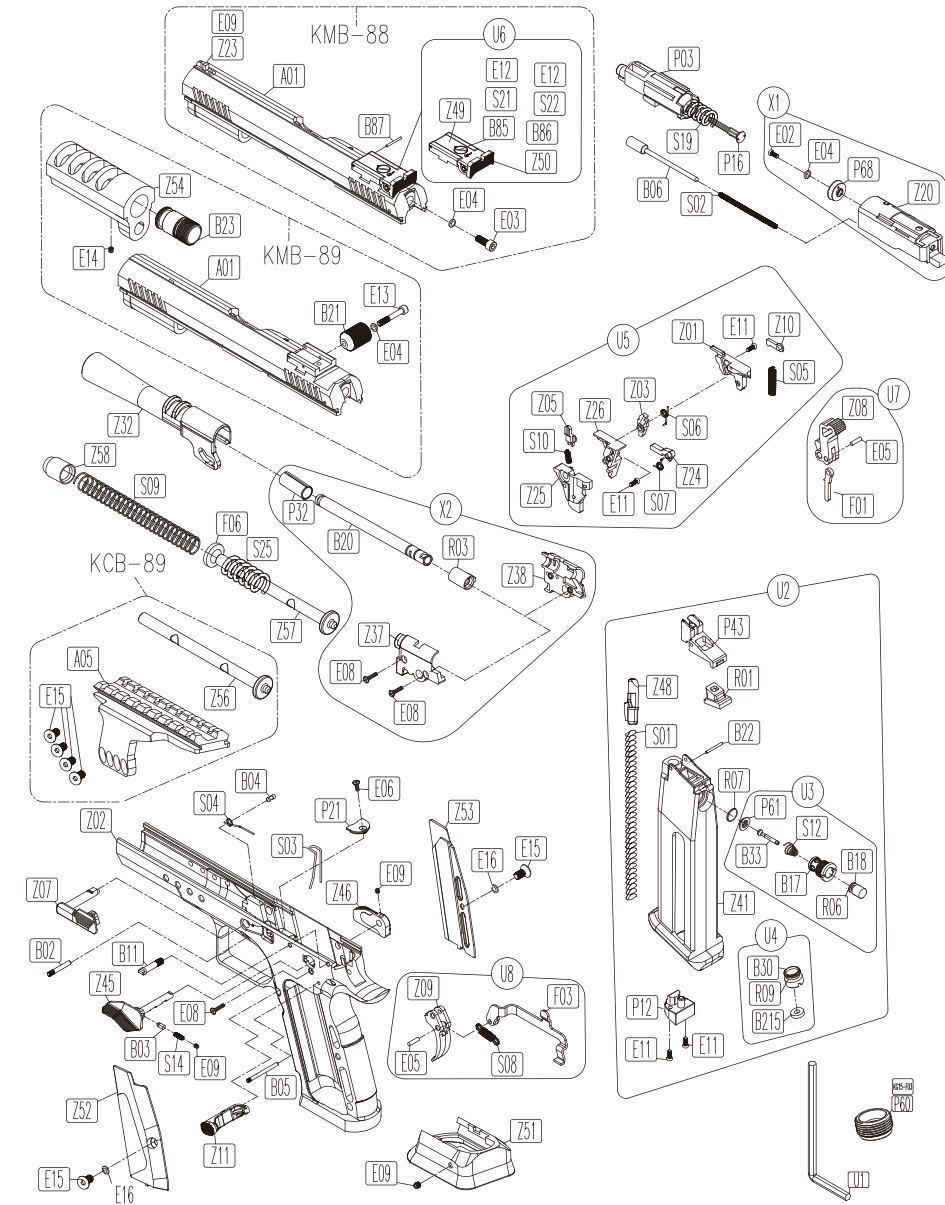

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.