




AAKCMF20 系列說明書

AAKCMF20 INSTRUCTION MANUAL

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
SINCE 1978 www.kwcgun.com

台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD.,
RENDE DIST., TAINAN CITY
71752, TAIWAN (R.O.C.)
TEL : +886-6-2798175
FAX : +886-6-2798176
sales@kwcgun.com
www.kwcgun.com

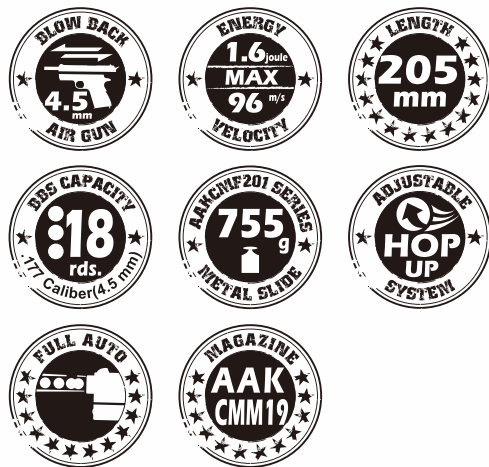

操作/OPERATION

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE




- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine directly falling on ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

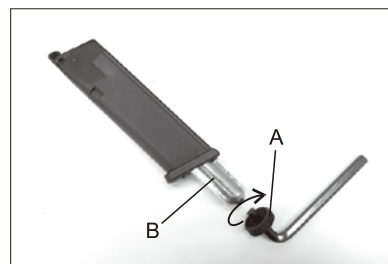

- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBS

彈匣最多可裝18顆B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
BB's max capacity is 18 rounds. If you load more than this quantity, you would bring any abnormal problems.



4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出“卡嗒”為止。
Insert fully loaded magazine in the airsoft until you hear the sound of “CLICK”.

5. B.B彈上膛 CHAMBERING THE BB

將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。
Pulling the slide back, when the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. 保險切換 SWITCH SAFETY



- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指
- ▲ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。
Aim the target and pull the trigger to shoot.

故障/BREAK DOWN




- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: hold open function as real pistol.

4. 往左滑出槍管, 本體和上蓋就可分離。 Slide outer barrel to the left side to separate frame and Slide.




5. HOP UP 調整 adjust HOP UP system.

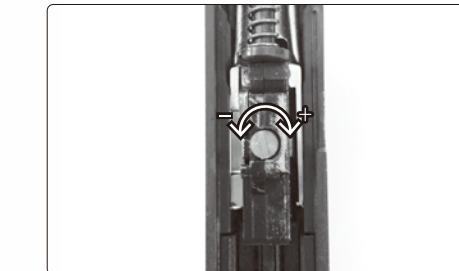

拆解 / DISASSEMBLY

1. 按下卡榫, 取出彈匣 Please take magazine catch to release the magazine.

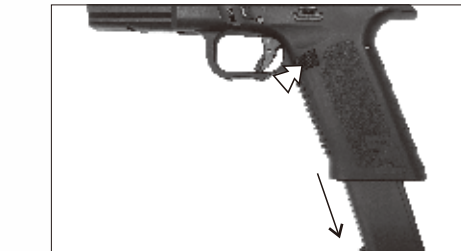


2. 上蓋滑套上膛 Pull the slide back.



3. 上蓋定位件往下按住 Press down the slide catch.





排除: 將上蓋往後拉, 向下倒出即可。 SOLUTION: Pull the slide back and pour the BB out from barrel.

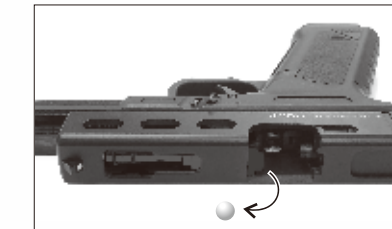

保養及維護 MAINTENANCE GUIDE

當射擊約2000發時, 建議你如圖所示, 以矽油脂適當在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑, 以利滑動。
After every 2,000 BB shots, lubricate slide and frame track, hammer and firing pin is recommended. Please see picture below for suggested lubricate area.

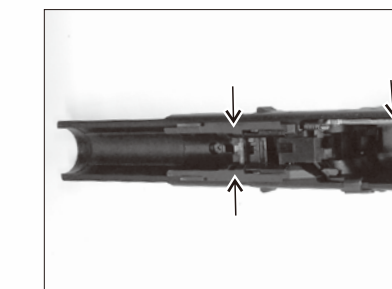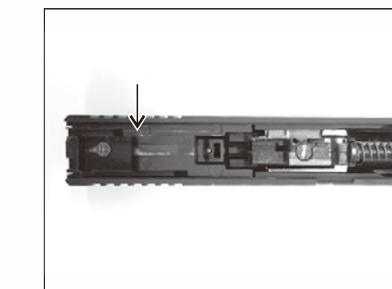

故障的原因與排除 BREAK DOWN FAQ

- * 卡彈可能原因:
Possible reason for BB jam:
 - a. 裝彈排列不整齊
BB does not stack properly.
 - b. 不良B.B彈
Bad quality BB
 - c. 空擊發易造成零件損耗, 請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.



⚠️ WARNING 警告

請務必嚴格遵守 使用說明指導書

For your safety, please read this manual carefully before use.

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。


- 除了發射時外，不要將手指頭掛在板機上。
- 選擇安全與適當標靶
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C (122°F) 以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety can fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- Avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for small children.
- Your backstop should be inspected for wear before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm②BB with unsmoothed surface③reused BB that has been fired④incorrect projectiles not design for this airgun
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

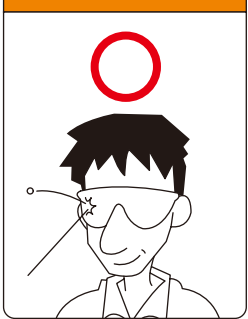


★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airgun.



★不可攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。

★Always transport an airgun in a locked carrying case. Make sure it is unloaded and on safe.

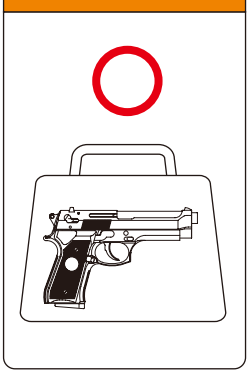


★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

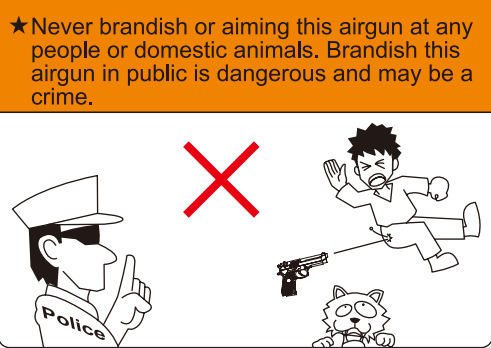


★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

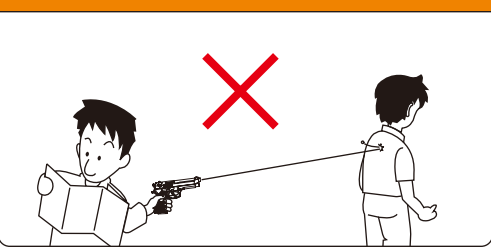

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

★Disassemble, modify, or alter of your airgun may cause malfunction, void your warranty and may make it unsafe to use.

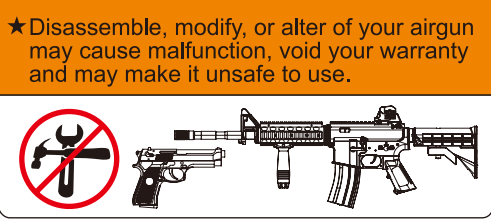


Do not display this pistol in public—it may confuse people and may be a crime. 請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。

AAKCMF20 系列 零件表
AAKCMF20 SERIES PARTS LIST

NO.	零件名稱	UNIT	NO.	零件名稱	UNIT
P03	扳機配件	TRIGGER ACCESSORY	KMB22-R01	子彈迫緊	RUBBER CHAMBER
P04	前準星	FRONT SIGHT	R02	氣嘴迫緊	GAS ROUTE PACKING
P05	後準星	REAR SIGHT	G002	O形環 1X2id	O-RING 1X2id
P08	滑套射嘴	LOADING NOZZLE	G008	O形環 1X6	O-RING 1X6
P11	彈匣卡榫	MAGAZINE CATCH	G015	O形環 S-4	O-RING S-4
P13	彈匣上部	MAGAZINE RIB	G016	O形環 PU S-4(黃)	O-RING PU S-4
P18	上蓋緩衝件	SLIDE BUFFER	G034	O型環 P-9	O-RING P-9
P19	內槍管配件	INNER BARREL UNIT	G038	O形環 2X13	O-RING 2X13
P20	彈匣底座配件	MAGAZINE BASE ACCESSORY	F01	上蓋止動片	SLIDE STOPPER
P28	槍管定位件左	BARREL LOCATOR (L)	F02	上蓋卡榫彈片	SLIDE CATCH SPRING PLATE
P31	本體	FRAME	F03	單連發切換配件右	FULL/SEMI AUTO SWITCH BUTTON ACCESSORY (R)
P33	氣流控制件	FLOATING VALVE	F04	單連發切換配件左	FULL/SEMI AUTO SWITCH BUTTON ACCESSORY (L)
P34	槍管定位件右	BARREL LOCATOR (R)	L02	回位導桿外桿	RECOIL BAR OUTER SLEEVE
KMB07-P41	心棒迫緊	VALVE PACKING	L03	子彈迫緊調整螺絲	HOP UP ADJUST SCREW
A01	上蓋	SLIDE	L04	滑套射嘴軸	LOADING NOZZLE PIN
A02	槍管導管	OUTER BARREL	L05	上蓋卡榫彈片軸	SLIDE CATCH SPRING PLATE AXLE
			L06	擊鐵軸	HAMMER PIN
			L07	擊鐵卡榫軸套	HAMMER CATCH PIN SLEEVE
Z03	氣缸	CYLINDER	L08	撞針軸	FIRING PIN AXLE
Z05	單連發切換鈕	FULL/SEMI AUTO SWITCH BUTTON	L11	連發卡榫軸	FULL AUTO CATCH PIN
Z06	槍身內套	INNER FRAME BASE	L13	扳機配件軸	TRIGGER ACCESSORY PIN
Z07	扳機定位件	TRIGGER LOCATOR	L14	上蓋止動片軸套	SLIDE STOPPER PIN SLEEVE
Z08	上蓋定位件	SLIDE LOCATOR	L15	扳機軸	TRIGGER PIN
Z09	撞針卡榫	FIRING PIN CATCH	L16	扳機定位件軸	TRIGGER LOCATOR PIN
Z10	擊鐵	HAMMER	L17	擊鐵卡榫軸	HAMMER CATCH PIN
Z11	擊鐵卡榫	HAMMER CATCH	L18	單連發切換鈕軸	FULL/SEMI AUTO SWITCH BUTTON PIN
Z12	撞針	FIRING PIN	L19	單連發切換鈕定位軸	FULL/SEMI AUTO SWITCH BUTTON LACTOR PIN
Z13	擊鐵箱	CHASSIS	L25	氣缸後罩軸	CYLINDER REAR COVER PIN
Z15	槍管蓋(右)	INNER BARREL CASE(R)	L26	射嘴回位壓簧導軸	LOADING NOZZLE RECOIL SPRING PIN
Z17	槍管蓋(左)	INNER BARREL CASE(L)	L27	彈匣上部固定軸	MAGAZINE RIB FIX PIN
Z19	子彈迫緊調整片	HOP-UP ADJUST PLATE	L28	回位導桿前配件	RECOIL BAR FRONT ACCESSORY
Z20	氣缸後罩	CYLINDER REAR COVER	L29	擊鐵扭簧定位套	HAMMER SPRING LOCATOR
Z21	連發卡榫	FULL AUTO CATCH	KCB23-L30	心棒	VALVE
Z22	扳機連桿	TRIGGER BAR	KCB23-L31	心棒後部	VALVE REAR
Z24	彈匣本體	MAGAZINE FRAME	L32	氣閥本體	VALVE FRAME
Z27	保險	SAFETY	L36	內槍管	INNER BARREL
Z28	鋼瓶鎖緊件	MAGAZINE BOTTOM CAP	L44	回位導桿	RECOIL BAR
Z30	扳機	TRIGGER	L45	回位導桿螺絲	RECOIL BAR SCREW
Z43	彈匣滑粒	MAGAZINE FOLLOWER			

AAKCMF20 系列 零件分解圖
AAKCMF20 SERIES EXPLODED VIEW

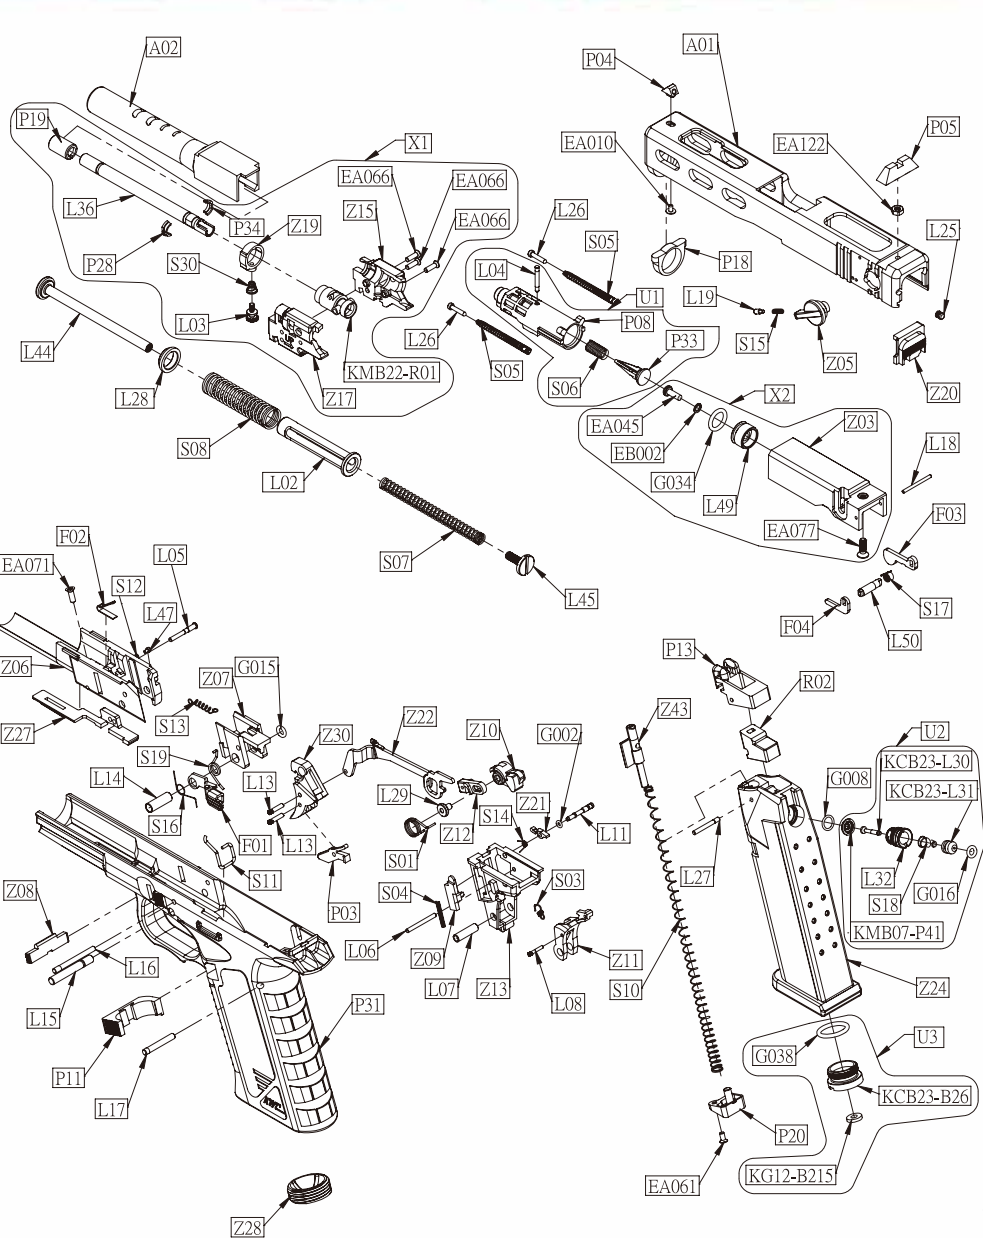

※零件有時為了改良而不經預告變更。
Spare parts may be modified for quality improvement
And such modification may be without advance notice.