




AAKCMF20系說明書

AAKCMF20 INSTRUCTION MANUAL

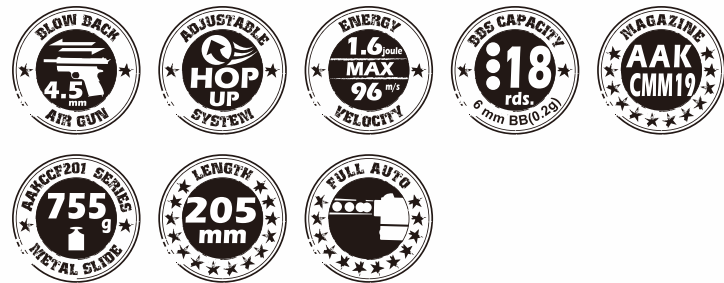

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD
www.kwcgun.com

台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL: +886-6-2798175 FAX: +886-6-2798176 sales@kwcgun.com

操作說明 / OPERATION

1. 取出彈匣 RELEASE MAGAZINE


- ▲ 注意: 請勿使彈匣直接掉落地面, 以防止變形或損壞。
- ▲ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.



2. CO2小鋼瓶12g的使用 INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底內件後, 置入小鋼瓶B, 再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時, 請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

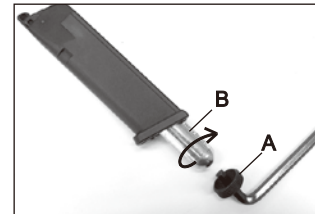


- ▲ 注意: 為維護彈匣使用壽命, 請盡可能不要殘留CO2氣體於彈匣內。
- ▲ CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.

3. 填裝B.B彈 LOADING BBs

為了使擊發順暢, 填裝方法是讓B.B彈在彈匣中一粒接著一粒。

For smooth shooting, Load BBs one by one.

- ▲ 注意: 彈匣最多可裝18發B.B彈, 如強行裝入更多, 可能造成不當損壞及無法上膛, 請注意。
- ▲ CAUTION: Magazine max capacity is 18 rounds. Loading more than this quantity could bring malfunctions.

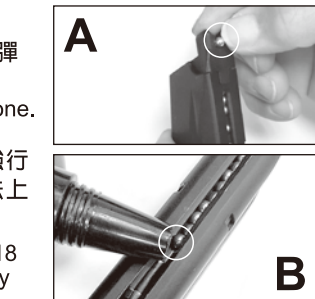

4. 彈匣上膛 INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入, 直到彈匣卡榫發出“卡嗒”為止。Insert fully loaded magazine in the airgun until you hear the sound of “CLICK”.

5. B.B彈上膛 CHAMBERING THE BB


將上蓋往後拉到底, 放開上蓋則上蓋會自動回位, 同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.



- ▲ 注意: 拉動上蓋時, 請勿將手指扣住扳機, 以免發生不當射擊, 造成危險。
- ▲ CAUTION: When pulling the slide, please don't pull the trigger in the same time to avoid misfire and dangerous.

6. 保險切換 SWITCH SAFETY

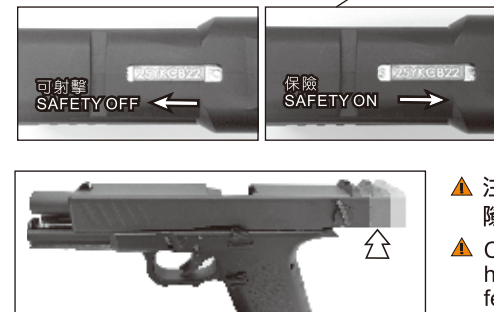

- ▲ 注意: 上蓋滑動時, 注意縫隙夾到手指。
- ▲ CAUTION: This airgun has a realistic blowback feature. Be careful of the pinch point.

8. 射擊 SHOOTING

對準目標區後扣下扳機, 則B.B彈將被射擊出去。


Aim the target and pull the trigger to shoot.



- ▲ 注意: B.B彈用完時, 上蓋會後定卡住。
- ▲ CAUTION: When magazine out of BB, it has hold open function as real pistol.

拆解 / DIS-ASSEMBLY

- 1. 按下卡榫, 取出彈匣。
- Press the magazine catch to release the magazine.

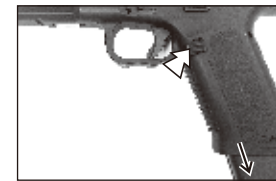

- 2. 上蓋滑套上膛
- Pull the slide back.




- 3. 上蓋定位件往下按住
- Press down the slide catch.



- 4. 往左滑出槍管, 本體和上蓋就可分離
- Slide outer barrel to the left side to separate frame and Slide.



- 5. HOP UP調整
- adjust HOP UP system.

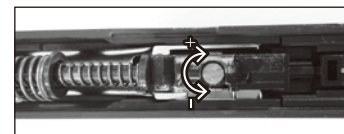


故障原因與排除 / BREAKDOWN FAQ

* 卡彈可能原因: THE REASON FOR BBS JAM:

- a. 裝彈排列不整齊
The BBs in the magazine does not line up very well.
- b. 不良B.B彈
Bad quality BBs.
- c. 空擊發易造成零件損耗, 請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.


- * 排除: 將上蓋往後拉, 向下倒出即可。
- Solution: pull the slide back and pour the BBs out from slide.

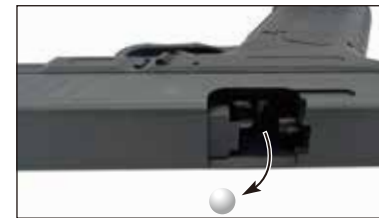

保養及維護 / MAINTENANCE GUIDE

每當射擊約2000發時, 建議如下圖所示, 以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot, spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.

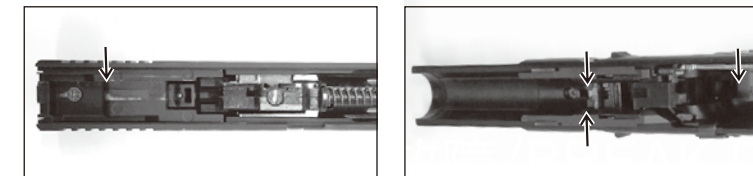

警告

請務必嚴格遵守使用說明指導書

READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。


- 除了發射時外，不要將手指頭掛在鈹機上。
- 選擇安全與適當標靶。
- 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
- 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
- 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
- 請妥善保管產品在未成年孩童無法伸手取得的場所。
- 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
- 請使用高品質BB彈，請勿使用①口徑大於4.4mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
- 最高的使用及儲藏CO2小鋼瓶環境為50°C(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
- 檢查任何掉落之槍枝，以確保未影響其功能。

This airgun is intended for recreational or training purposes.To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

- Do not put your finger on the trigger except shooting.
- Please choose safe and proper target.
- Please always keep the airgun on safe and unloaded when not using.
- Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
- To avoid ricochet. Never shoot at a hard or flat surface or at water.
- Keep the airgun out of reach for underage children.
- Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
- Only use high quality 4.5mm steel BBs. Never use ①BB diameter larger than 4.4 mm ② BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun.
- Do not expose CO2 cartridges to heat or store them at temperatures above 50°C (122°F). CO2 cartridges may over heat or explode at temperatures above 50°C (122°F).
- Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。

★Always wear eye protection when using airgun.

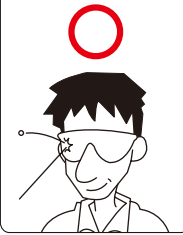

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。

★When in public, always carry the airgun in a locked carrying case or bag. Make sure it is unloaded and on safe.



★使用低動能遊戲用槍前，請務必詳讀說明書內容。

★Read the owner's manual before using the airgun.




★請不要由槍口向內探視。

★To Avoid accidental discharge, do not look directly into the barrel.




★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。

★Never brandish or aiming this airgun at any people or animals. Brandish this airgun in public is dangerous and may be a crime.

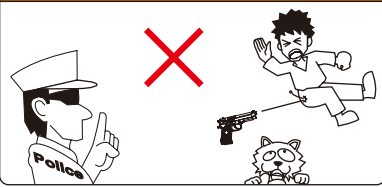


★請確認後再發射BB彈方向，附近無人或動物存在。

★Always be aware of your surrounding before and during shooting and select a safe area for target practice.

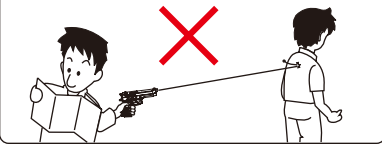

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。

 ★Disassemble, modify, or alter of your airgun may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。

Do not display this airgun in public—it may confuse people and may be a crime.

KCMF20 系列 零件表

KCMF20 SERIES PARTS LIST

NO.	零件名稱	NO.	零件名稱	NO.	零件名稱
P03	鈹機配件	Z43	彈匣滑粒	L49	氣缸迫緊配件
P04	前準星	KMB22-R01	子彈迫緊	L50	單連發切換配件軸
P05	後準星	R02	氣嘴迫緊	KCB23-B26	氣瓶頂針
P08	滑套射嘴	G008	O形環 1x6	KG12-B215	氣瓶頂針迫緊
P11	彈匣卡榫	G016	O形環 PU S-4(黃)		
P13	彈匣上部	G034	O型環 P-9	S01	擊鐵扭簧
P18	上蓋緩衝件	G038	O形環 2x13	S03	撞針拉簧
KCCB46-P18	回位導桿外桿			S04	撞針卡榫壓簧
P19	內槍管配件	F01	上蓋止動片	S05	滑套配嘴回位壓簧
KCCB46-P19	回位導桿前配件	F02	上蓋卡榫彈片	S06	氣流控制件壓簧
P20	彈匣底座配件	F03	單連發切換配件(右)	S07	回位導桿壓簧
P28	槍管定位件左	F04	單連發切換配件(左)	S08	回位導桿緩衝壓簧
P31	本體	F05	連發卡榫	S10	彈匣壓簧
P33	氣流控制件			S11	彈匣卡榫壓簧
P34	槍管定位件(右)	L03	子彈迫緊調整螺絲	S12	保險壓簧
KMB07-P41	心棒迫緊	L04	滑套射嘴軸	S13	鈹機連桿拉簧
		L05	上蓋卡榫彈片軸	S14	連發卡榫扭簧
A01	上蓋	L06	擊鐵軸	S15	單連發切換鈕壓簧
A30	槍管導管	L07	擊鐵卡榫軸套	S16	上蓋止動片扭簧
Z03	氣缸	L08	撞針軸	S17	單連發切換鈕配件扭簧
Z05	單連發切換鈕	L12	單連發卡榫軸	S18	心棒壓簧
Z06	槍身內套	L13	鈹機配件軸	S19	鈹機扭簧
Z07	鈹機定位件	L14	上蓋止動片軸套	S30	子彈迫緊調整壓簧
Z08	上蓋定位件	L15	鈹機軸		
Z09	撞針卡榫	L16	鈹機定位件軸	EA010	⊕M2x4尖附華司螺絲
Z10	擊鐵	L17	擊鐵卡榫軸	EA045	⊕M3.0x8
Z11	擊鐵卡榫	L18	單連發切換鈕軸	EA061	⊕Ⅲ 2.3x5
Z12	撞針	L19	單連發切換鈕定位軸	EA066	⊕Ⅲ M2.3xL8
Z13	擊鐵箱	L26	射嘴回位壓簧導軸	EA071	⊕Ⅲ 2.6x8 尖黑
Z15	槍管蓋(右)	L27	彈匣上部固定軸	EA077	⊕Ⅲ M3x10
Z17	槍管蓋(左)	L29	擊鐵扭簧定位套	EA122	六角螺帽M3x2.3
Z19	子彈迫緊調整片	KCB23-L30	心棒	EB002	彈簧墊圈
Z20	氣缸後罩	KCB23-L31	心棒後部		
Z22	鈹機連桿	L32	氣閥本體	X1	內槍管組件
Z24	彈匣本體	L36	內槍管	X2	氣缸半組件
Z27	保險	L44	回位導桿	U1	滑套射嘴組件
Z28	鋼瓶鎖緊件	L45	回位導桿螺絲	U2	氣閥組件
Z30	鈹機	L47	保險軸	U3	氣瓶頂針組件

零件有時為了改良而不經預告變更

KCMF20 系列 零件表

KCMF20 SERIES PARTS LIST

NO.	UNIT	NO.	UNIT	NO.	UNIT
P03	TRIGGER ACCESSORY	Z43	MAGAZINE FOLLOWER	L49	CYLINDER PACKING ACCESSORY
P04	FRONT SIGHT	KMB22-R01	RUBBER CHAMBER	L50	FULL/SEMI AUTO SWITCH ACCESSORY PIN
P05	REAR SIGHT	R02	GAS ROUTE PACKING	KCB23-B26	PUNCTURE VALVE
P08	LOADING NOZZLE	G008	O-RING 1x6	KG12-B215	PUNCTURE VALVE PACKING
P11	MAGAZINE CATCH	G016	O-RING PU S-4		
P13	MAGAZINE RIB	G034	O-RING P-9	S01	HAMMER SPRING
P18	SLIDE BUFFER	G038	O-RING 2x13	S03	FIRING PIN SPRING
KCCB46-P18	RECOIL BAR OUTER SLEEVE			S04	FIRING PIN CATCH SPRING
P19	INNER BARREL ACCESSORY	F01	SLIDE STOPPER	S05	LOADING NOZZLE RECOIL SPRING
KCCB46-P19	RECOIL BAR FRONT ACCESSORY	F02	SLIDE CATCH SPRING PLATE	S06	FLOATING VALVE SPRING
P20	MAGAZINE BASE ACC.	F03	FULL/SEMI AUTO SWITCH BUTTON ACCESSORY (R)	S07	RECOIL BAR SPRING
P28	BARREL LOCATOR (L)	F04	FULL/SEMI AUTO SWITCH BUTTON ACCESSORY (L)	S08	RECOIL BAR BUFFER SPRING
P31	FRAME	F05	FULL AUTO CATCH	S10	MAGAZINE SPRING
P33	FLOATING VALVE			S11	MAGAZINE CATCH SPRING
P34	BARREL LOCATOR (R)	L03	HOP UP ADJUST SCREW	S12	SAFETY SPRING
KMB07-P41	VALVE PACKING	L04	LOADING NOZZLE PIN	S13	TRIGGER BAR SPRING
A01	SLIDE	L05	SLIDE CATCH SPRING PLATE AXLE	S14	FULL AUTO CATCH SPRING
A30	OUTER BARREL	L06	HAMMER PIN	S15	FULL/SEMI AUTO SWITCH BUTTON SPRING
Z03	CYLINDER	L07	HAMMER CATCH PIN SLEEVE	S16	SLIDE STOPPER SPRING
Z05	FULL/SEMI AUTO SWITCH BUTTON	L08	FIRING PIN AXLE	S17	FULL/SEMI AUTO SWITCH BUTTON ACCESSORY SPRING
Z06	INNER FRAME BASE	L12	FULL/SEMI CATCH PIN	S18	VALVE SPRING
Z07	TRIGGER LOCATOR	L13	TRIGGER ACCESSORY PIN	S19	TRIGGER SPRING
Z08	SLIDE LOCATOR	L14	SLIDE STOPPER PIN SLEEVE	S30	HOP UP ADJUST SPRING
Z09	FIRING PIN CATCH	L15	TRIGGER PIN		
Z10	HAMMER	L16	TRIGGER LOCATOR PIN	EA010	SCREW M2x4
Z11	HAMMER CATCH	L17	HAMMER CATCH PIN	EA045	SCREW M3.0x8
Z12	FIRING PIN	L18	FULL/SEMI AUTO SWITCH BUTTON PIN	EA061	SCREW 2.3x5
Z13	CHASSIS	L19	FULL/SEMI AUTO SWITCH BUTTON LACTOR PIN	EA066	SCREW M2.3xL8
Z15	BARREL CASE (R)	L26	LOADING NOZZLE RECOIL SPRING PIN	EA071	SCREW 2.6x8
Z17	BARREL CASE (L)	L27	MAGAZINE RIB FIX PIN	EA077	SCREW M3x10
Z19	HOP-UP ADJUST PLATE	L29	HAMMER SPRING LOCATOR	EA122	HEX NUT M3x2.3
Z20	CYLINDER BACK COVER	KCB23-L30	VALVE	EB002	SPRING WASHER
Z22	TRIGGER BAR	KCB23-L31	VALVE REAR		
Z24	MAGAZINE FRAME	L32	VALVE FRAME	X1	INNER BARREL UNIT
Z27	SAFETY	L36	INNER BARREL	X2	CYLINDER UNIT
Z28	MAGAZINE BOTTOM CAP	L44	RECOIL BAR	U1	LOADING NOZZLE UNIT
Z30	TRIGGER	L45	RECOIL BAR SCREW	U2	INNER VALVE UNIT
		L47	SAFETY PIN	U3	PUNCTURE VALVE UNIT

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCMF20 系列 零件分解圖

KCMF20 SERIES EXPLODED VIEW

