MADE IN TAIWAN

AAKCCB88、89系説明書

AAKCCB88、89 INSTRUCTION MANUAL

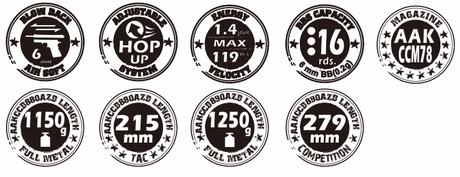

KWC® KIEN WELL TOY INDUSTRIAL CO., LTD www.kwcgun.com

台南市仁德區義林路168巷89號

NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)

TEL : +886-6-2798175 FAX : +886-6-2798176 sales@kwcgun.com

操作説明 / OPERATION

1. 取出彈匣
RELEASE MAGAZINE

⚠ 注意：請勿使彈匣直接掉落地面，以防止變形或損壞。

⚠ CAUTION: Magazine falling directly on the ground could cause deform or damage on it. Please be aware.

2. CO2小鋼瓶12g的使用
INSTALLING 12G CO2 CARTRIDGE

逆時針轉出彈匣底内件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底内件A。當刺破鋼瓶出氣時，請快速鎖緊。

Turn the magazine cap out counter-clockwise and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

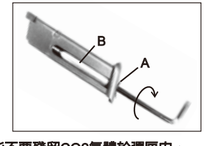

⚠ **注意：為維護彈匣使用壽命，請盡可能不要殘留CO2氣體於彈匣内。**

⚠ **CAUTION: To protect your magazine, please release all of the CO2 out of the magazine after every use.**

3. 填裝B.B彈
LOADING BBs

為了使擊發順暢，填裝方法是讓B.B彈在彈匣中一粒接著一粒。

For smooth shooting, Load BBs one by one.

⚠ 注意：彈匣最多可裝16發B.B彈，如強行裝入更多，可能造成不當損壞及無法上膛，請注意。

⚠ CAUTION: Magazine max capacity is 16 rounds. Loading more than this quantity could bring malfunctions.

4. 彈匣上膛
INSERTING THE MAGAZINE

將裝好B.B彈的彈匣插入槍身往上推入，直到彈匣卡榫發出"卡擦"為止。

Insert fully loaded magazine in the airsoft until you hear the sound of "CLICK".

5. B.B彈上膛
CHAMBERING THE BB

將上蓋往後拉到底，放開上蓋則上蓋會自動回位，同時亦將B.B彈送上膛完成射擊準備。

Pulling the slide back. When the slide has been pulled completely back, release the slide without pushing and the BBs will be chambered.

⚠ 注意：拉動上蓋時，請勿將手指扣住鈑機，以免發生不當射擊，造成危險。

⚠ CAUTION: When pulling the slide，please don't pull the trigger in the same time to avoid misfire and dangerous.

6. 保險切換
SWITCH SAFETY

⚠ 注意：必須在上膛狀態下保險才可關閉。

⚠ CAUTION: Safety can only be turned on when this airsoft is cocked.

⚠ 注意：上蓋滑動時，注意縫隙夾到手指。

⚠ CAUTION: This airsoft has a realistic blowback feature. Be careful of the pinch point.

7. KCCB-88後準星調整
KCCB-88 REAR SIGHT ADJUSTMENT

上下準星調整
Vertical adjustment

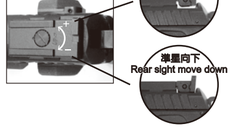

左右準星調整
Horizontal adjustment

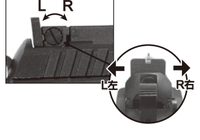

8. 射擊
SHOOTING

對準目標區後扣下鈑機，則B.B彈將被射擊出去。

Aim the target and pull the trigger to shoot.

⚠ 注意：B.B彈用完時，上蓋會後定卡住。

⚠ CAUTION: When magazine out of BB, it has hold open function as real pistol.

拆解 / DIS-ASSEMBLY

1. KCCB-89系列需先卸下鏡橋，以方便拆解。
Please take off the mount on KCCB89 before disassemble the gun.

2. 按下卡榫，取出彈匣。
Press the magazine catch to release the magazine.

3.退上蓋至導管卡榫。
Pull the slide until the slide stopper lock the slide.

4.壓下槍身右面卡榫。
Press the pin on the right side of frame.

5.導管卡榫左面往上推，上蓋即可取出。
Pull the slide stopper from left side of pistol to take off the slide.

6.HOP UP 調整。
Adjust HOP UP system.

故障原因與排除 / BREAKDOWN FAQ

＊卡彈可能原因：
THE REASON FOR BBS JAM:

a. 裝彈排列不整齊
The BBs in the magazine does not line up very well.

b. 不良B.B彈
Bad quality BBs.

c. 空擊發易造成零件損耗，請避免此動作
Please avoid dry firing, for it could cause parts deformed or damage.

＊排除：將上蓋往後拉，向下倒出即可。
Solution: pull the slide back and pour the BBs out from slide.



保養及維護 / MAINTENANCE GUIDE

每當射擊約2000發時，建議如下圖所示，以矽油在上蓋與本體滑動接觸面及擊鐵、撞針作動處潤滑。

After every 2000 BBs shot，spray silicone oil on the surface between slide and frame, hammer and firing pin for lubrication. Suggestion shown as below pictures.

WARNING 警告

請務必嚴格遵守使用說明指導書
READ THIS OWNER'S MANUAL COMPLETELY

此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀說明書，正確的操作享受愉快的射擊運動。

1.除了發射時外，不要將手指頭掛在鈑機上。
2.選擇安全與適當標靶。
3.在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
4.如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
5.千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
6.請妥善保管產品在未成年孩童無法伸手取得的場所。
7.每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
8.請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本說明書指名的發射物。
9.最高的使用及儲藏CO2小鋼瓶環境為50℃(122℉)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
10.檢查任何掉落之槍枝，以確保未影響其功能。

This airsoft is intended for recreational or training purposes. To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

1.Do not put your finger on the trigger except shooting.
2.Please choose safe and proper target.
3.Please always keep the airgun on safe and unloaded when not using.
4.Like all mechanical devices, an airgun safety could fail. Always handle the airgun safely even when the safety is "on safe". Never point the airgun at any people.
5.To avoid ricochet. Never shoot at a hard or flat surface or at water.
6.Keep the airgun out of reach for underage children.
7.Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
8.Only use high quality BB. Never use ①BB diameter larger than 6 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airgun
9.Do not expose CO2 cartridges to heat or store them at temperatures above 50℃ (122℉). CO2 cartridges may over heat or explode at temperatures above 50℃ (122℉).
10.Check any gun that has been dropped to ensure that its function has not been affected.

★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airsoft.

★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airsoft.

★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or animals. Brandish this airsoft in public is dangerous and may be a crime.

★攜帶低動能遊戲用槍在公共場所行走，請務必將槍袋子或盒子內。確認並未上膛和關閉保險。
★When in public, always carry the airsoft in a locked carrying case or bag. Make sure it is unloaded and on safe.

★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.



★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.

★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法盜辦。
★Disassemble, modify, or alter of your airsoft may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.

請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

KCB-88、89系列 零件表
KCB-88、89 SERIES PARTS LIST

NO.	零件名稱
P03	滑套射嘴
P12	彈匣底座配件
P13	彈匣上部
P14	子彈迫緊可調旋鈕
P16	氣流控制件
P17	彈匣滑粒
P21	彈匣卡榫固定件
P41	心棒迫緊
P60	彈匣底內件
P112	氣缸迫緊
A01	上蓋
A05	鏡橋
Z01	擊鐵箱右蓋
Z02	本體
Z03	擊鐵卡榫
Z07	上蓋止動片
Z08	擊鐵
Z09	鈑機
Z10	保險釋放件
Z11	彈匣卡榫
Z20	氣缸
Z23	前準星
Z24	撞針
Z25	擊鐵箱左蓋
Z26	擊鐵箱中蓋
Z27	槍管左蓋
Z28	槍管右蓋
Z31	後準星
KCB72-232	後準星罩門
Z32	槍管導管
Z45	保險左
Z46	保險右
Z51	槍柄座
Z52	槍柄左
Z53	槍柄右
Z54	上蓋前罩-89用
Z56	槍管導桿 長-89用
Z57	槍管導桿 短-88用
Z58	導桿套
F01	擊鐵壓簧導桿
F03	鈑機連桿
F05	子彈迫緊調整片
F06	回位導桿華司
R01	氣嘴迫緊
KR02-H	子彈迫緊(HOP-UP)
G008	O型環 1x6id
G002	O型環 1x2id
G016	O型環 S-4
G039	O型環 2x15
B001	鋼珠1.0
KCB75-B02	彈匣上部軸
B02	鈑機軸
B03	保險軸
B04	止動片扭簧軸
B05	擊鐵箱軸
B06	射嘴壓簧導軸
B10	內槍管
B11	擊鐵軸
B15	後準星上下調整螺絲
B16	後準星左右調整螺絲
KCB72-B17	後準星座軸
B17	氣閥本體
B18	心棒後部
B20	上蓋前罩連接件
B21	上蓋拉柄
B30	氣瓶頂針
B33	心棒
B37-6	氣缸迫緊墊圈
B215	氣瓶頂針迫緊
S01	彈匣壓簧
S02	射嘴回位壓簧
S03	彈匣卡榫扭簧
S04	止動片扭簧
S05	擊鐵壓簧
S06	擊鐵卡榫扭簧
S07	撞針扭簧
S08	鈑機連桿拉簧
S09	回位壓簧
S14	保險壓簧
S19	氣流控制件壓簧
S20	心棒壓簧
S21	後準星壓簧
S22	後準星左右調整壓簧
S25	導桿緩衝壓簧
EA045	螺絲 ⊕M3x8xP0.5
EA061	螺絲 皿⊕2.3x5
EA064	螺絲 皿⊕2.3x6
EA066	螺絲 皿⊕2.3x8
EA083	內六角螺絲M3x10LxP0.5
EA086	內六角螺絲M3x30LxP0.5
EA094	皿內六角螺絲M4x8LxP0.7
EA104	內六角止付螺絲 M3x3LxP0.5 黑
EA109	內六角止付螺絲 M4x6LxP0.7 黑
EB002	彈簧墊圈M3.0x0.6T
EB006	碟型墊圈M4x1.0T.
EC012	彈簧銷2.5*8
EF009	六角鈑手
U3	氣閥組件
U4	氣瓶頂針組件
U5	擊鐵箱組件
U6	擊鐵組件
U7	後準星組件
U8	鈑機組件
X1	氣缸半組件
X2	內槍管組件

零件有時為了改良而不經預告變更

KCB-88、89系列 零件表
KCB-88、89 SERIES PARTS LIST

NO.	UNIT
P03	LOADING NOZZLE
P12	MAGAZINE BASE ACC.
P13	MAGAZINE RIB
P14	HOP UP ADJUSTOR
P16	FLOATING VALVE
P17	MAGAZINE FOLLOWER
P21	MAGAZINE CATCH JOINT
P41	VALVE PACKING
P60	MAGAZINE BOTTOM CAP
P112	CYLINDER PACKING
A01	SLIDE
A05	OPTIC MOUNT
Z01	CHASSIS (R)
Z02	FRAME
Z03	HAMMER CATCH
Z07	SLIDE STOPPER
Z08	HAMMER
Z09	TRIGGER
Z10	SAFETY RELEASE
Z11	MAGAZINE CATCH
Z20	CYLINDER
Z23	FRONT SIGHT
Z24	FIRING PIN
Z25	CHASSIS (L)
Z26	CHASSIS (M)
Z27	BARREL CASE (L)
Z28	BARREL CASE (R)
Z31	REAR SIGHT
KCB72-232	REAR SIGHT COVER
Z32	OUTER BARREL
Z45	SAFETY (L)
Z46	SAFETY (R)
Z51	GRIP BASE
Z52	GRIP (L)
Z53	GRIP (R)
Z54	COMPENSATOR(89)
Z56	RECOIL GUIDE ROD(89)
Z57	RECOIL GUIDE ROD(88)
Z58	RECOIL GUIDE ROD CAP
F01	HAMMER SPRING BAR
F03	TRIGGER BAR
F05	HOP-UP ADJUST PLATE
F06	RECOIL GUIDE ROD WASHER
R01	GAS ROUTE PACKING
KR02-H	RUBBER CHAMBER (HOP-UP)
G008	O-RING 1x6id
G002	O-RING 1x2id
G016	O-RING S-4
G039	O-RING 2x15
B001	STEEL BALL
KCB75-B02	MAGAZINE RIB PIN
B02	TRIGGER PIN
B03	SAFETY PIN
B04	SLIDE STOPPER SPRING PIN
B05	CHASSIS PIN
B06	FLOATING NOZZLE SPRING PIN
B10	INNER BARREL
B11	HAMMER PIN
B15	REAR SIGHT ADJUST SCREW (UP & DOWN)
B16	REAR SIGHT ADJUST SCREW(R & L)
KCB72-B17	REAR SIGHT BASE PIN
B17	VALVE FRAME
B18	VALVE REAR
B20	COMPENSATOR CONNECTOR (89)
B21	SLIDE COCKING BAR(89)
B30	INNER VALVE
B33	VALVE
B37-6	CYLINDER PACKING RING
B215	PUNCTURE VALVE PACKING
S01	MAGAZINE SPRING
S02	LOADING NOZZLE RECOIL SPRING
S03	MAGAZINE CATCH SPRING
S04	SLIDE STOPPER SPRING
S05	HAMMER SPRING
S06	HAMMER CATCH SPRING
S07	FIRING PIN SPRING
S08	TRIGGER BAR SPRING
S09	RECOIL SPRING
S14	SAFETY SPRING
S19	FLOATING VALVE SPRING
S20	VALVE SPRING
S21	REAR SIGHT SPRING
S22	REAR SIGHT ADJUST SPRING (L & R)
S25	RECOIL GUIDE ROD BUMPER SPRING
EA045	SCREW M3x8xP0.5
EA061	SCREW 2.3x5
EA064	SCREW 2.3x6
EA066	SCREW 2.3x8
EA083	SCREW M3x10LxP0.5
EA086	SCREW M3x30LxP0.5
EA094	SCREW M4x8LxP0.7
EA104	SCREW M3x3LxP0.5
EA109	SCREW M4x6LxP0.7
EB002	SPRING WASHER M3.0x0.6T
EB006	SPRING WASHER M4x1.0T.
EC012	SCREW 2.5x8
EF009	WRENCH
U3	INNER VALVE UNIT
U4	PUNCTURE VALVE UNIT
U5	CHASSIS UNIT
U6	REAR SIGHT UNIT
U7	HAMMER UNIT
U8	TRIGGER UNIT
X1	CYLINDER UNIT
X2	INNER BARREL UNIT

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCB-88、89系列 零件分解圖
KMB-88、89 SERIES EXPLODED VIEW

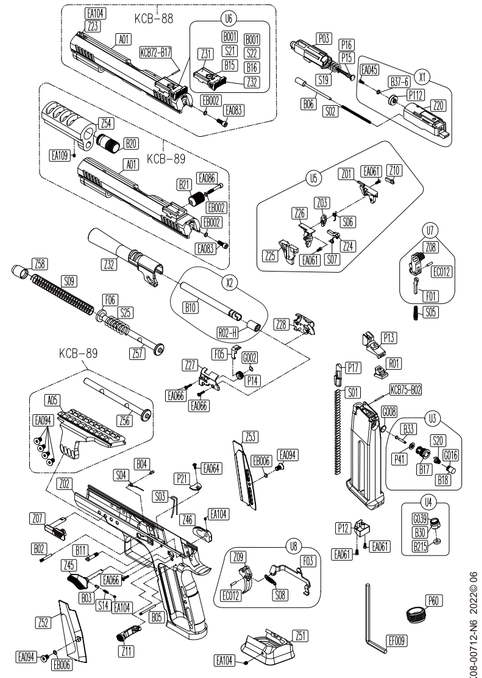

K08-00712-N6 2022© 06