
KA-38 系列 零件分解圖
KA-38 SERIES DISASSEMBLY DIAGRAM

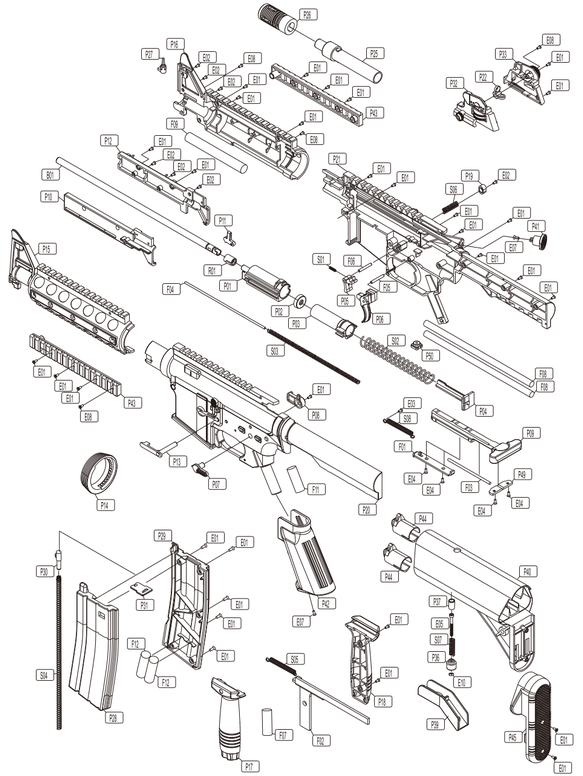

※規格有時爲了改良而不經預告變更。
THE ACTURAL PARTS IS POSSIBLE DIFFERENT FROM THE PICTURE.

KA-38 SERIES PARTS LIST

No.	UNIT	No.	UNIT	No.	UNIT
P01	Breech	P33	Rear sight base R	B01	Barrel
P02	Piston Packing	P36	Stock catch upper sleeve		
P03	Piston	P37	Stock catch under sleeve	R01	Hop Uop rubber chamber
P04	Spring Base	P39	Stock lock		
P05	Piston catch	P40	CQR Stock body	S01	Piston catch spring
P06	Trigger	P41	Assist knob set	S02	Piston spring
P07	Safety	P42	Grip	S03	Breech recoil spring
P08	Safety catch	P43	Side Rail	S04	Magazine Spring
P09	Charging Handle	P44	CQB Stock front screw	S05	TAC front grip recoil spring
P10	Barrel cover L	P45	CQR Stock rear cap	S06	Magazine Catch Spring
P11	Hop Up adjustor plate	P49	Charging Handle plate	S07	Stock Catch Spring
P12	Barrel cover R	P50	Grip lock	S08	Charging handle recoil spring
P13	Magazine catch L				
P14	Slip Ring			E01	Screw ⊕2.6*8
P15	Rail L	F01	Charging handle lock	E02	Screw ⊕2.3*6
P16	Rail R	F02	Tac front grip plate	E03	Screw ⊕2.3*6*6
P17	TAC front grip L	F03	Charging handle bar	E04	Screw ⊕2.6*8
P18	TAC front grip R	F04	Breech recoil bar	E05	Hexagon screw m3*30l*p0.5
P19	Magazine catch R	F05	Trigger pin	E07	Screw ⊕3.0*12*8
P20	Safety	F06	Piston Catch pin	E08	Screw ⊕2.6*12
P21	Lower receiver R	F07	Grip Weight	E10	Hexagon nut m3*5.5*p0.5
P22	Rear sight	F08	Stock weight		
P25	Outer barrel	F09	Rail weight		
P26	Compensator	F11	Lower Receiver Weight		
P27	Front sight	F12	Magazine Weight		
P28	Magazine L				
P29	Magazine R				
P30	Magazine follower				
P31	Magazine cap				
P32	Rear sight base L				

KA-38 系列 零件一覽表

圖號	零件名稱	圖號	零件名稱	圖號	零件名稱
P01	氣缸	P33	後準星座右	B01	槍管
P02	活塞迫緊	P36	槍托卡榫下軸套		
P03	活塞	P37	槍托卡榫上軸套	R01	HOP UP 子彈迫緊
P04	彈簧支座	P39	槍托調整板		
P05	活塞卡榫	P40	CQB 槍托本體	S01	活塞卡榫壓簧
P06	鈑機	P41	機槍助進器	S02	活塞壓簧
P07	保險	P42	槍柄	S03	氣缸回位壓簧
P08	保險配件	P43	滑軌左側件	S04	彈匣壓簧
P09	拉桿	P44	CQB 槍托前旋蓋	S05	握柄回位拉簧
P10	槍管接筒左	P45	CQB 槍托後蓋	S06	彈匣卡榫壓簧
P11	HOP UP 調整片	P49	拉桿下底	S07	槍托卡榫壓簧
P12	槍管接筒右	P50	槍柄固定件	S08	拉桿回位拉簧
P13	彈匣卡榫左				
P14	固定環			E01	⊕2.6*8束黑.熱
P15	戰術滑軌左	F01	拉桿配件	E02	皿⊕2.3*6束黑.熱
P16	戰術滑軌右	F02	握柄推桿	E03	⊕2.3*6*6邊 尖鋐
P17	戰術握柄左	F03	拉桿軸	E04	皿⊕2.6*8尖黑
P18	戰術握柄右	F04	氣缸回位軸	E05	內六角螺絲M3*30L*P0.5.黑
P19	彈匣卡榫右	F05	鈑機軸(3*21.8)	E07	⊕3.0*12*8邊 尖黑
P20	本體左	F06	活塞卡榫軸(2.5*21.5)	E08	⊕2.6*12 束黑
P21	本體右	F07	握柄配重	E10	內六角螺帽M3*5.5*P0.5.黑
P22	後準星	F08	槍托配重		
P25	外槍管(107.短)	F09	戰術滑軌配重		
P26	防火帽	F11	本體配重		
P27	前準星	F12	彈匣配重		
P28	彈匣左				
P29	彈匣右				
P30	彈匣滑粒				
P31	彈匣上蓋				
P32	後準星座左				

MODEL KA-38 系說明書
MODEL KA-38 INSTRUCTION MANUAL




- **高比重耐衝擊材質**
  - High Density Composite Material For Extended Durability
- **6mm BB彈**
  - 6mm BBs
- **可調式HOP UP**
  - Adjustable HOP UP
- **R.I.S.戰術握把**
  - R.I.S Handguard (Picatinny Standard)
- **高裝彈數彈匣350發**
  - High Capacity 350 Round Magazine For Extended Play
- **伸縮槍托**
  - Retractable Stock To Fit All Arm Lengths

NO.KA-38 系列
NO.KA-38 SERIES

KWC® 建瑋玩具工業股份有限公司
KIEN WILL TOY INDUSTRIAL CO., LTD.
台南市仁德區義林路168巷89號
NO.89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C.)
TEL：+886-6-2798175 FAX：+886-6-2798176
sales@kwcgun.com
www.kwcgun.com

K08-00695-A3

操作說明 OPERATION

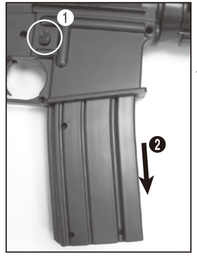

1.按下編號1按鈕以退下彈匣。

1.To release the magazine, push on the lock located on the side (1)and slide the magazine out of the rifle (2).

2.推開彈匣上方蓋子，即可放滿350發BB彈。

2.Open the upper cover and load the magazine as shown on the picture. The maximum capacity is about 350 rounds.









3.務必關閉

3.Close the tab

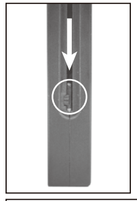

4.拉下彈匣滑粒及如圖固定。

4.Push down the magazine follower and lock it as shown.

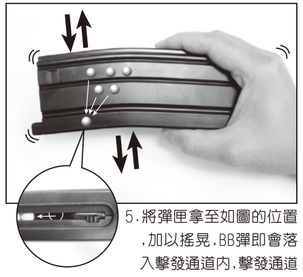

5.將彈匣拿至如圖的位置，加以搖晃，BB彈即會落入擊發通道內，擊發通道最多可置放18顆BB彈，擊發完畢後，再重複以上動作。

5.In order to fill the firing compartment (about 18 BBs) of the magazine, turn the magazine as shown on the picture and shake gently. This will allow about 18 ammos to be placed in the firing compartment. Once these available rounds are shot, repeat precedent operations to replenish again the firing compartment. Repeat at will




6.釋放彈匣滑粒。

6.Unlock the magazine follower.



7.將彈匣往上推至定位。

7.Slide the magazine in the receptacle until it is locked (a distinct click will be heard).

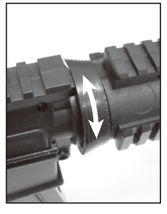

8.轉動如圖的HOP UP調整環，可調整彈道。

8.Turn the ring to adjust the HOP UP and to fine tune your shot, according ammo weight and weather conditions.





9.上膛有二種方式

①拉動槍機上方拉柄，注意方向需平穩的向後拉動，否則易斷。


②拉動護木下方握柄。

9.In order to load the chamber, pull firmly the loading handle (or the Vertical grip) back until a click is heard, then release. At this stage, your softair rifle is loaded. All safety rules must apply among which: do not aim at a person or a hardsurface.



10.擊發時，瞄準目標後，開保險至如圖FIRE位置，扣動鈑機，之後再重覆上圖上膛動作。


10.To start shooting, aim at a target, put the safety on the FIRE" position (this riffle is a single shot action and requires loading after each shot). Pull the trigger. Once the available rounds are shot, repeat step on Picture 6 in order to replenish the firing compartment again. Repeat at will.

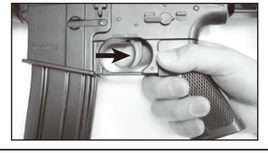



11.當結束射擊練習不再使用時，請將保險推回SAFE位置，此時鈑機即被鎖定不可扣下，並移除彈匣內所有BB彈。

11.Once finished shooting, put the shooting selector back on the “Safe”position. Make sure the rifle is stored empty of any ammunition, magazine removed.

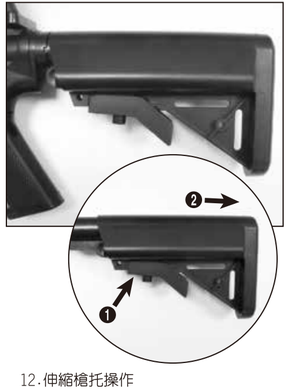

12.伸縮槍托操作

12.How to operate your Retractable Stock.

請務必嚴格遵守 使用說明指導書

USE BEFORE READING MANUAL SERIOUSLY

這個製品是針對18歲以上的消費者所開發的運動射擊手槍。對於使用方法不正確或因為改造所發生的故障或事故，本公司概不負責。請務必正確使用，便可享受愉快的運動射擊。

1. 槍未裝彈時，也絕對不可以將槍口指向人或動物。
2. 除了發射時外，不要將手指頭掛在鈑機上。
3. 除了使用時外，不要裝上子彈。
4. 請經常事先確認，在發射方向上沒有人及動物存在。
5. 請保管在未滿對象年齡孩童無法伸手拿取的場所。
6. 請勿將容易損壞的物品當作目標，或放置在目標後面。
7. 除了指定的BB彈外請勿使用。
8. 槍及子彈請勿加工改造。
9. 絕對不要由槍口探視。
10. 射擊時，請務必用防風眼鏡或射擊眼鏡保護眼睛。

THIS PRODUCT ONLY USE FOR 18 YEAR OLD ABOVE. WE WILL NOT BE RESPONSIBLE FOR ANY ACCIDENT OR MALFUNCTION CAUSED BY IMPROPER HANDLING, MODIFICATION, ALTERATION OR DISASSEMBLING OF THE KWC AIR/GAS HOBBY PISTOL. YOU COULD ENJOY THE SHOOTING EXERCISE ACCORDING TO THE CORRECT OPERATION.

1. NEVER BRANDISH OR FIRE THIS GUN AT ANY PEOPLE, ANIMAL PUBLIC OR PRIVATE PROPERTY.
2. DO NOT PUT YOUR FINGER ON THE TRIGGER EXCEPT SHOOTING.
3. DO NOT LOAD ANY BBS EXCEPT SHOOTING
4. ALWAYS BE AWARE OF YOUR SURROUNDING BEFORE SHOOTING AND SELECT A SAFE AREA FOR TARGET PRACTICE.
5. KEEP OUT OF REACH OF SMALL CHILDREN.
6. DO NOT FIRE THIS GUN AT A FRAGILE OBJECT AND MAKE SURE NO SUCH OBJECT IS BEHIND YOUR TARGET.
7. DO NOT USE OTHER BB THAN THE KWC'S BB OR RE-USE IT.
8. DO NOT MAKE ANY UNAUTHORIZED MODIFICATION ON THIS GUN OR BB BULLET.
9. DO NOT LOOK DIRECTLY INTO THE GUN.
10. ALWAYS WEAR EYE PROTECTION OR GOGGLE TO PREVENT INJURIES WHEN YOU ARE SHOOTING.



EVEN YOU KNOW IT IS ONLY A TOY GUN, BUT PEOPLE MIGHT THINK IT IS.

請不要忘了，雖然自己知道這只是玩具，但不知道的人，會以為這是真槍。