

AAKCCD43 系説明書

AAKCCD43 INSTRUCTION MANUAL

滑套作動	固定	RECOIL	NON-BLOWBACK
子彈上旋	固定式	HOP UP	FIXED
材質	塑膠/金屬	MATERIAL	METAL SLIDE
填彈數	15 發	CAPACITY	15 ROUNDS
初速	138 米/秒	VELOCITY	138 m/s
焦耳數	1.9 焦耳	ENERGY	1.9 Joule max
長度	205 公釐	LENGTH	225 mm
重量	800 克	WEIGHT	800 g
適用彈匣	AAKCCS43	MAGAZINE	AAKCCS43

KWC® SINCE 1979 KIEN WELL TOY INDUSTRIAL CO., LTD www.kwcgun.com
台南市仁德區義林路168巷89號
NO. 89, LN. 168, YILIN RD., RENDE DIST., TAINAN CITY 71752, TAIWAN (R.O.C)
TEL : +886-6-2798175 FAX : +886-6-2798176 sales@kwcgun.com

操作説明 / OPERATION

射擊前的準備
BEFORE SHOOTING




1. 按下卡榫
Press the button.
2. 取出彈匣
Release the magazine.



3. 使用六角鈑手反時針方向取出彈匣底內件。
Use hexagonal wrench to remove the magazine cap by counter-clockwise.

4. 逆時針轉出彈匣底內件後，置入小鋼瓶B，再以順時針方向鎖緊彈匣底內件A。當刺破鋼瓶出氣時，請快速鎖緊。
Turn the magazine cap out counter-clockwise. and place CO2 cartridge B inside the magazine. Rapidly turn the screw A clockwise when piercing the cartridge in the magazine.

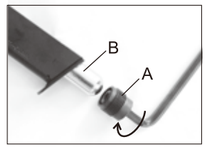

5. 拉下滑粒。
Pull the magazine follower down.

6. 填裝B.B彈。
Loading BBs.
為了使擊發順暢，填裝方法是讓B.B彈在彈匣中一粒接著一粒。
For smooth shooting, Load BBs one by one.



7. 最多可裝15粒。
Maximum BB capacity is 15 rounds.

射擊
SHOOTING

1. 將裝好B.B彈的彈匣插入槍身往上推入，直到彈匣卡榫發出〝卡嚓〞為止。
Insert fully loaded magazine in the airgun until you hear the sound of “CLICK”.




2. 瞄準目標物扣引鈑機，即可擊發。
Aim the target and pull the trigger.



⚠ 注意：在長期不使用的狀態下，請將彈匣內的氣體洩放掉。
⚠ CAUTION: Release all of the gas in the magazine when it will not use in long-term period.

安全裝置
SAFETY

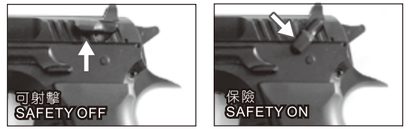

故障原因與排除 / BREAK DOWN FAQ

1. 不良的B.B彈是造成卡彈的原因，請使用品質優良的 B.B彈。
Bad quality BB is the main reason to cause BB jam. Please use high quality BB avoid jamming problem.

2. 當卡彈時，請盡可能先取出彈匣，再以不傷槍管的軟質細棒（不可大於6mm直徑），從槍口置入清除。
When BB jamming, first please release the magazine from pistol then use a soft stick (diameter no bigger than 6mm) to clear up the barrel.

3. 空擊發易造成零件損耗，請避免此動作。
Please avoid dry firing, for it could cause parts deformed or damage.

4. 當扣引鈑機時，此時B.B彈即同時在上膛階段，不可扣引一半時又回復，因為如此的動作，將有可能上膛兩發B.B彈。
Pulling trigger will load BB in the barrel. Therefore, please do not pull the trigger half way and release the trigger. This action could load 2 BBs in the pistol and cause jamming.

5. 使用一段時間後，請再次用含矽油之潤滑油，潤滑撞針及鈑機軸心。
Please spray lubricant(with silicone oil type) at firing pin and trigger pin after a certain of use, pictures shown.



WARNING 警告

請務必嚴格遵守使用説明指導書
READ THIS OWNER'S MANUAL COMPLETELY


此低動能遊戲用槍是針對喜愛射擊運動的消費者所開發。避免因使用方法不正確或改造所發生的故障或事故，請務必詳讀説明書，正確的操作享受愉快的射擊運動。

1. 除了發射時外，不要將手指頭掛在鈑機上。
2. 選擇安全與適當標靶。
3. 在非使用期間，請保持保險關閉且退彈的狀態，就算在非使用狀態，也要如同其已裝彈。
4. 如任何的機械產品，槍的保險也可能失效。即使在保險關閉的狀態下也請小心的操作此槍，請勿將槍口對人。
5. 千萬不要對堅硬或平坦表面、水面射擊，以避免跳彈。
6. 請妥善保管產品在未成年孩童無法伸手取得的場所。
7. 每次使用前後都應該檢查擋彈物，假如擋彈物表面有磨損失效或是反彈時請停止使用。
8. 請使用高品質BB彈，請勿使用①口徑大於6mm②表面不平滑的③重複使用過的BB彈④非本説明書指名的發射物。
9. 最高的使用及儲藏CO2小鋼瓶環境為50℃(122°F)以內，高溫可能會造成CO2小鋼瓶過熱甚至爆炸。
10. 檢查任何掉落之槍枝，以確保未影響其功能。


This airsoft is intended for recreational or training purposes.To prevent improper handling, modification or alteration causing malfunction or accident, please read the owner's manual carefully. Enjoy the pleasant shooting experience by proper operation.

1. Do not put your finger on the trigger except shooting.
2. Please choose safe and proper target.
3. Please always keep the airsoft on safe and unloaded when not using.
4. Like all mechanical devices, an airsoft safety could fail. Always handle the airsoft safely even when the safety is “on safe”. Never point the airsoft at any people.
5. To avoid ricochet. Never shoot at a hard or flat surface or at water.
6. Keep the airsoft out of reach for underage children.
7. Your backstop should be inspected for worn out before and after each use. Discontinue use of the backstop if surface shows signs of failure or ricochet.
8. Only use high quality BB. Never use ①BB diameter larger than 6 mm ②BB with unsmoothed surface ③reused BB that has been fired ④incorrect projectiles not design for this airsoft.
9. Do not expose CO2 cartridges to heat or store them at temperatures above 50℃ (122°F). CO2 cartridges may over heat or explode at temperatures above 50℃ (122°F).
10. Check any gun that has been dropped to ensure that its function has not been affected.


★使用低動能遊戲用槍前，請務必戴上保護眼鏡或面罩。
★Always wear eye protection when using airsoft.

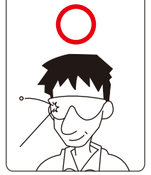

★使用低動能遊戲用槍前，請務必詳讀說明書內容。
★Read the owner's manual before using the airsoft.

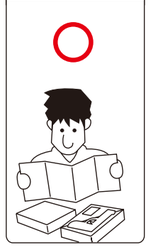


★請不要在公開場合使用低動能遊戲用槍，也請不要拿低動能遊戲用槍對準人或動物。
★Never brandish or aiming this airsoft at any people or animals. Brandish this airsoft in public is dangerous and may be a crime.

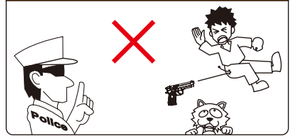

★攜帶低動能遊戲用槍在公共場所行走，請務必裝在袋子或盒子內。確認並未上膛和開啓保險。
★When in public, always carry the airsoft in a locked carrying case or bag. Make sure it is unloaded and on safe.



★請確認後再發射BB彈方向，附近無人或動物存在。
★Always be aware of your surrounding before and during shooting and select a safe area for target practice.



★請不要由槍口向內探視。
★To Avoid accidental discharge, do not look directly into the barrel.



★不可任意改造或加工低動能遊戲用槍，私自改造加工會造成產品損壞、保固失效，導致使用上不安全，甚至觸法送辦。
★Disassemble, modify, or alter of your airsoft may cause malfunction, revoke your warranty, make it unsafe to use and even break the law.



請不要忘了，雖然自己知道這只是玩具，但不知道的人會以為這是真槍。
Do not display this airsoft in public—it may confuse people and may be a crime.

KCCD43 系列 零件表
KCCD43 SERIES PARTS LIST

圖號	零件名稱
P02	本體
P03	保險 (左)
P04	保險 (右)
P05	擊鐵
P06	上蓋止動片
P07	彈匣卡榫
P08	槍柄 (左)
P09	槍柄 (右)
P10	彈匣滑粒
P11	底座定位件
P16	保險定位軸
P31	心棒蓋迫緊
P403	彈匣底內件
P420	槍管連動件
P727	槍管套
Z01	彈匣本體
Z04	撞針
Z07	保險連桿
Z08	鈑機連桿
Z11	上蓋
Z12	擊鐵箱 (右)
Z13	擊鐵箱 (左)
Z14	握柄配件

圖號	零件名稱
Z33	鈑機連動件
Z34	鈑機
B02	鈑機軸套
B03	鈑機連動件軸
B04	撞針軸套
B05	槍管
B19	心棒蓋
B33	氣瓶頂針
B215	氣瓶頂針迫緊
B465	心棒
F01	軸 (鈑機用)
F04	軸 (鈑機連桿用)
F05	軸 (擊鐵用)
F401	心棒壓簧墊圈
F463	撞針軸
F801	軸 (彈匣用)
EF005	鈑機連動件軸
S01	鈑機連桿扭簧
S02	彈匣卡榫扭簧
S03	撞針扭簧
S04	鈑機扭簧
S05	擊鐵扭簧
S06	保險定位軸壓簧

圖號	零件名稱
S401	彈匣壓簧
S402	撞針緩衝扭簧
S404	心棒壓簧
SM1	鈑機連動件扭簧
E01	E型扣環
E02	彈簧梢 (底座定位件用)
E03	一字特殊3.0x6束黑
E04	⊕2.3x6 尖黑熱螺絲
E05	⊕2.3x6 束黑熱螺絲
E06	⊕3x8 尖鋅螺絲
E07	止付螺絲 3x3
R01	子彈迫緊
R02	O形環 1.45x6.9id
R03	O形環 1x5
R04	O型環 1x4
R05	O型環 0.8x11.3id
R07	O型環 1x7 NBR70
R08	O形環 1x3
K01	導管貼紙
U1	內槍管組件
U2	鈑機連桿組件
U3	氣瓶頂針組件

零件有時為了改良而不經預告變更

KCCD43 系列 零件表
KCCD43 SERIES PARTS LIST


NO.	UNIT
P02	FRAME
P03	SAFETY (L)
P04	SAFETY (R)
P05	HAMMER
P06	SLIDE STOPPER
P07	MAGAZINE CATCH
P08	GRIP (L)
P09	GRIP (R)
P10	MAGAZINE FOLLOWER
P11	MAGAZINE BASE LOCATOR
P16	SAFETY LOCATOR PIN
P31	VALVE PACKING
P403	MAGAZINE BOTTOM CAP
P420	BARREL TOW
P727	OUTER BARREL CAP
Z01	MAGAZINE FRAME
Z04	FIRING PIN
Z07	SAFETY LINK
Z08	TRIGGER BAR
Z11	SLIDE
Z12	CHASSIS (R)
Z13	CHASSIS (L)
Z14	GRIP PLUG

NO.	UNIT
Z33	TRIGGER CONNECTOR
Z34	TRIGGER
B02	TRIGGER SLEEVE
B03	TRIGGER CONNECTOR PIN
B04	FIRING PIN SLEEVE
B05	INNER BARREL
B19	VALVE CAP
B33	PUNCTURE VAVLE
B215	PUNCTURE VAVLE PACKING
B465	VALVE
F01	PIN (TRIGGER)
F04	PIN (TRIGGER BAR)
F05	PIN (HAMMER)
F401	VALVE SPRING GASKET
F463	FIRING PIN AXLE
F801	PIN (MAGAZINE)
EF005	TRIGGER CONNECTOR PIN
S01	TRIGGER BAR SPRING
S02	MAGAZINE CATCH SPRING
S03	FIRING PIN SPRING
S04	TRIGGER SPRING
S05	HAMMER SPRING
S06	SAFETY LOCATING PIN SPRING

NO.	UNIT
S401	MAGAZINE SPRING
S402	FIRING PIN BUFFER SPRING
S404	VALVE SPRING
SM1	TRIGGER CONNECTOR SPRING
E01	E-RING
E02	SPRING PIN (MAGAZINE BASE LOCATOR)
E03	SCREW 3.0x6
E04	SCREW 2.3x6
E05	SCREW 2.3x6
E06	SCREW 3x8
E07	SCREW 3x3
R01	RUBBER CHAMBER
R02	O-RING 1.45x6.9id
R03	O-RING 1x5
R04	O-RING 1x4
R05	O-RING 0.8x11.3id
R07	O-RING 1x7 NBR70
R08	O-RING 1x3
K01	OUTER BARREL STICKER
U1	INNER BARREL UNIT
U2	TRIGGER BAR UNIT
U3	PUNCTURE VAVLE UNIT

Spare parts may be modified for quality improvement and such modification may be without advance notice.

KCCD43 系列 零件分解圖
KCCD43 SERIES EXPLODED VIEW

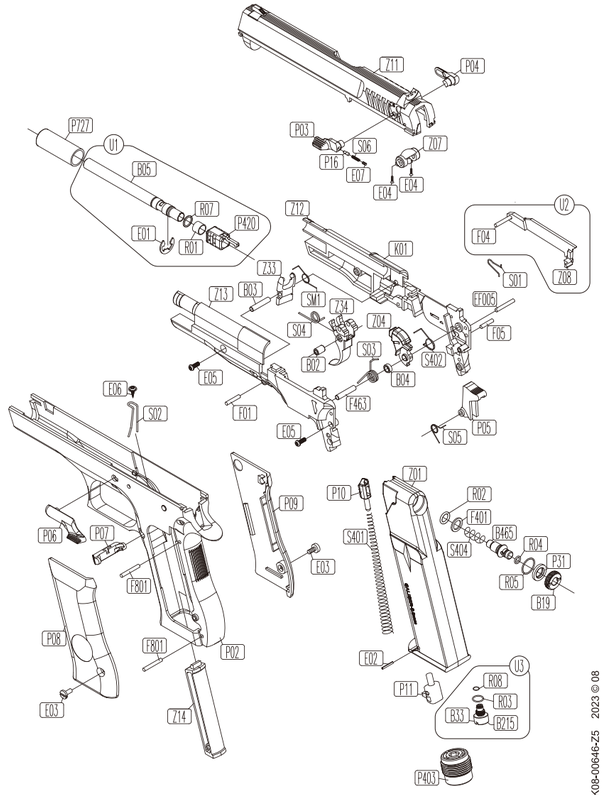

2023 © 08

K09-00646-Z5